 


Halfords Series

Item Code: 584067 Halfords 2 Tray Cart

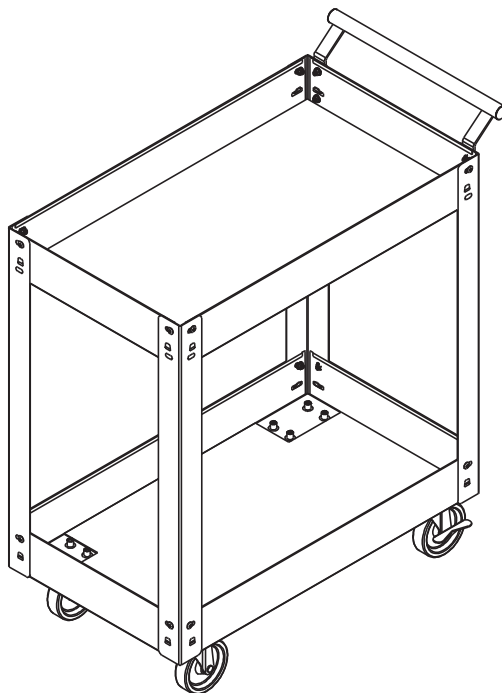

Caution:

Read and follow all information in this owners manual before use.
Keep for future reference.

Halfords Ltd. Redditch, B98 0DE.

 
SAFETY

SAFETY WARNINGS AND CAUTIONS

To avoid personal injury or product damage in use:

- Do not stand or lean on/in the cart.
- Always ensure the castor locks are on when stationary.
- Only use this product on even, level surfaces to prevent it from becoming unstable.
- When loading, place heavier items on the bottom of the unit first then load the top.
- Do not exceed the stated maximum weights listed below.
- Not suitable for mounting on a truck bed or any other moving objects.

Product Specifications

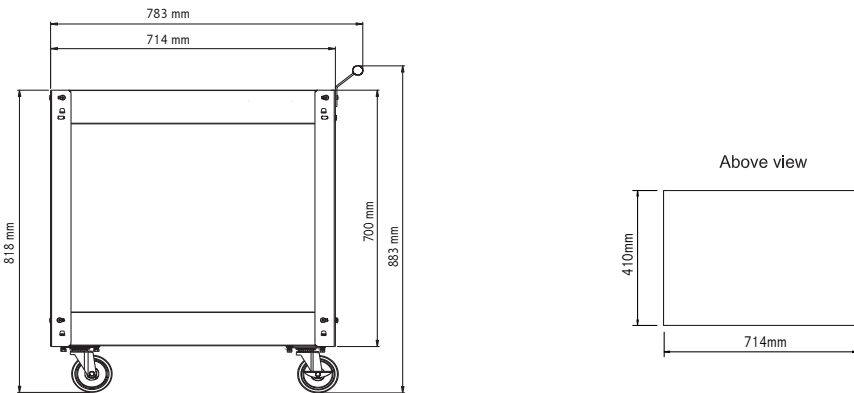


Tray Dimension: 707 (W) x 403 (D) x 91 (H) mm

Maximum Weight per Tray (x2): 50KG

OPERATION

Part	Description	Qty
1	TOP TRAY	1
2	UPRIGHT SUPPORT	4
3	TUBE HANDLE 400mm	1
4	BOLT M6*14mm,BLACK	2
5	BOLT M6*10mm,BLACK	18
6	SWIVEL CASTOR WITH BRAKE	2
7	BOLT M8*12mm,BLACK	16
8	NYLON NUT M8,BLACK	16
9	NYLON NUT M6,BLACK	20
10	SWIVEL CASTOR WITHOUT BRAKE	2
11	BOTTOM TRAY	1

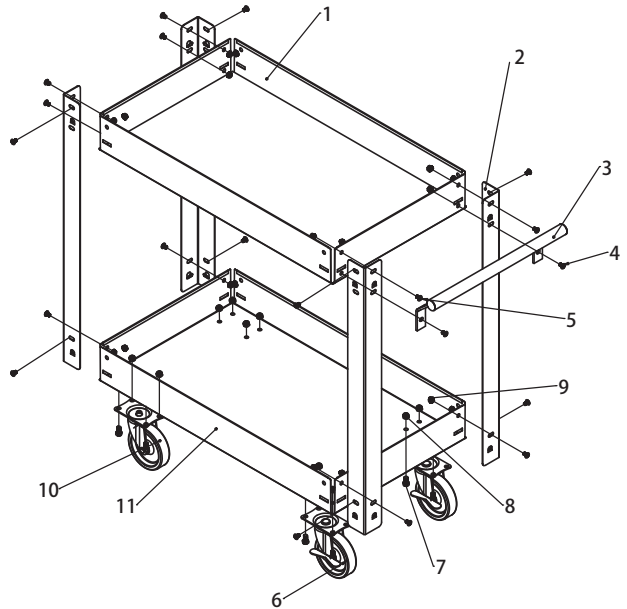 

(1) ATTACHING THE UPRIGHT SUPPORTS TO TRAYS AND SIDE HANDLE

1. Locate the bottom tray (11 - with additional castor holes).
2. Ensure the 4 upright supports (2) are correct way up (see drawing) and place the hooked sections onto the bottom tray. Loosely attach them with the bolts (5) and nuts (9).
3. Fit the top tray (1) into the slots on the upright supports (loosen the lower bolts more if required).
4. The handle (3) can be placed into the lower or upper mounting holes either side of the trolley. Use the longer bolts (4) and nuts (9) to install the handle.
5. Fit the remaining nuts and bolts to the top tray and uprights, Square up the unit and tighten all securely.

(2) ATTACHING THE CASTORS

1. Lay the cart down on its back. Use the packaging material to protect the paint finish.
2. Mount both swivel castors with brake (6) on the same side of the cart as the handle.
3. Attach each castor using 4 bolts (7) and nuts (8) per castor.
4. Return the cart to its upright position.

MAINTENANCE

Castors should be lubricated periodically.(See Halford's lubricant range). Hardware (nuts, bolts , screws) should be tightened periodically to maintain trouble free operation.