

## Visor Replacement Manual

### Pivot Mechanism Diagram:



### To remove the visor:

Completely open the visor. On one side of the helmet, pull the trigger down as displayed below and carefully pull the visor up and away from the helmet. Repeat this for the other side and remove the visor.



**To install the visor:**

Hold the visor in its completely open position on the front of the helmet. Insert the pivot hook and ensure it and the gear rail are aligned correctly. Press the visor in and towards the back of the helmet in one motion as shown below. The gear rail should also click into place. If not pull the trigger down and add extra pressure to help insert the gear rail. Repeat this for the other side.

