


GO KART

This product is to be assembled by an adult.
Please remove all packaging before giving to a child.


3+
YEARS

TOOLS REQUIRED

Screwdriver &
Spanner required.

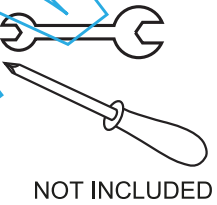

CONTENTS

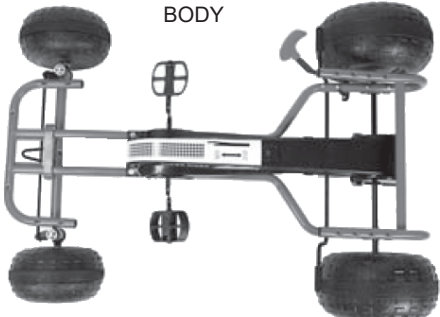

4PCS X M5 40MM BOLTS
4PCS X M5 45MM BOLTS
2PCS X M5 50MM BOLTS
4PC X DIA5 14MM WASHERS
6PCS X DIA5 12MM WASHERS
10PCS X M5 NUTS

SEAT



STEERING WHEEL



FRONT PANEL



STEERING SHAFT




FRONT PLATE




STEERING SUPPORT

*NOTE: SOME COMPONENTS MAY COME PRE-ASSEMBLED FOR SHIPMENT

ASSEMBLY INSTRUCTIONS

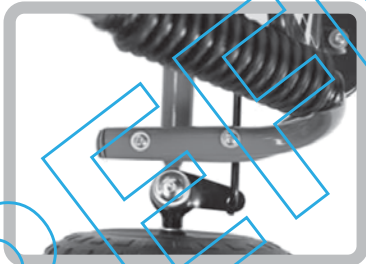


1. Attach the steering support to the frame of the go-kart, using 4 x M5 45mm bolts, dia5 12mm washers and M5 nuts.

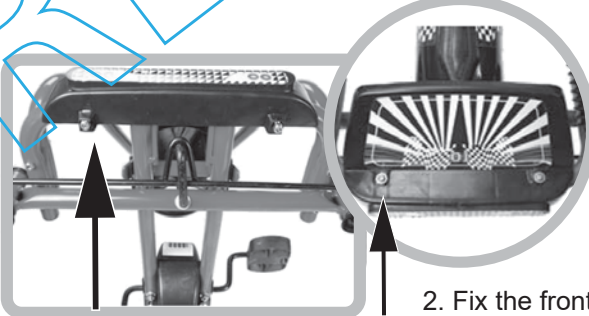

2. Fix the front plate on the front of the go-kart with 2 x M5 50mm bolts, dia5 12mm washers and M5 nuts.



3. Assemble the steering shaft and front panel: Remove the nut and washers from the Steering shaft (see picture). Slide the plastic J hook of the front panel into the metal clip on the frame (see picture). Insert a metal washer and then a plastic washer to the steering shaft. Insert the steering shaft with the plastic and metal washer from the bottom to the car body. The J hook of the steering shaft should go into the triangle area of the steering linkage. The steering shaft pass through the car body then through the steering support tube.

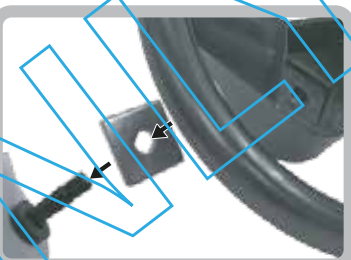

4. Assemble the steering wheel: On the steering shaft, insert 2 plastic washers (one below the top of the front panel, the other above the top of the front panel, then a square metal washer then steering wheel, then a square metal washer then a metal spring washer an then fix with a nut.



5. Place the steering wheel cover in the centre of the steering wheel.



6. Fix the seat to the frame of the go-kart using 4 x M5 40mm bolts, dia5 14mm washers and M5 nuts.

A GUIDE TO SAFE GO KARTING

- 1 We recommend this Go Kart is for pavement use only. It is dangerous to ride on a public highway.
- 2 Do not ride at night. Visibility is often limited at dawn and dusk.
- 3 Always give pedestrians right-of-way and don't ride too close to them. Never park your Go Kart where it can cause a nuisance.
- 4 Avoid hazards that may cause you to lose control of your Go Kart such as pot holes, uneven pavements and manhole covers.
- 5 Leave plenty of room when passing parked vehicles and watch out for doors being opened in your path.
- 6 Remember that braking distance should be increased in wet weather, and regular checks of brakes, steering and lighting should be made.
- 7 Never carry passengers on your Go Kart. Never carry packages in your hands while riding or fix anything to your Go Kart that could obstruct your visibility or control.
- 8 Do not wear anything that restricts your hearing.
- 9 Always ride with both hands on the handlebars.
- 10 Do not wear very loose clothing which could hang down and become caught in the wheels. Wear cuff bands or trouser clips to keep your trousers from getting caught in the chainwheel.
- 11 We recommend that light-coloured or fluorescent clothing be worn which helps others to see you in daylight and poor light.
- 12 Always wear proper safety equipment. We recommend a helmet, longsleeved shirt, long trousers, shoes, elbow pads and knee pads. Gloves and eye protection also make good sense. Cover your handlebars, stem and top tube with safety pads for extra protection.
- 13 Do not ride your Go Kart if the chain cover is not attached

Please refer to the Highway Code regarding rules for cyclists

WARNINGS:

- DO NOT LET CHILD PLAY IN THE STREET.
DO NOT USE THIS GO KART ON OR NEAR A SLOPE.
- DO NOT LET CHILD PLAY ON STAIRS, PORCH OR ANYWHERE ELSE WHERE THE CHILD MIGHT FALL.
- WHEN USING THIS PRODUCT, CHILDREN SHOULD BE UNDER ADULT SUPERVISION AT ALL TIMES.
- DO NOT USE GO KART NEAR STOVES, HEATERS, IRONING BOARDS, POOLS OR NEAR ANY OTHER HOT OR DANGEROUS OBJECTS.
- DO NOT LEAVE GO KART OUTSIDE AND PROTECT IT FROM THE WEATHER.
- USE OUTDOORS ONLY DURING DAYLIGHT HOURS.
- DO NOT BUMP INTO WALLS, POLES, ETC. IT COULD CAUSE POSSIBLE INJURY AND/OR DAMAGE TO THE VEHICLE.
- CAUTION AND CARE MUST BE TAKEN IN THE UNPACKING AND ASSEMBLY OF THIS PRODUCT. BECAUSE OF SMALL AND DANGEROUS PARTS AND PACKAGING MATERIAL, ADULT ASSEMBLY IS REQUIRED.
- NOT SUITABLE FOR CHILDREN UNDER 3 YEARS. SMALL PARTS. CHOKING HAZARD"
- PROTECTIVE EQUIPMENT SHOULD BE WORN. MV RECOMMENDS THE USE OF PROTECTIVE PADS AND HELMET WHEN USING THIS PRODUCT.
- NOT TO BE USED IN TRAFFIC
- FOR AGE 3+ YEARS
- RECOMMENDED TYRE PRESSURE: 30 PSI. CHECK TYRE PRESSURE EVERY TIME BEFORE USE.
- FOR A CHILD WEIGHT NOT EXCEEDING 30KGS.
- AN ADULT SHOULD CARRY OUT CHECKS AND MAINTENANCE OF THE PARTS AT REGULAR INTERVALS. IF THESE CHECKS ARE NOT CARRIED OUT THE TOY COULD OVERTURN OR CAUSE A FALL.

Retain this information for future reference.

Design and colour may vary.

Please retain this leaflet for reference to the manufacturer.

Carefully made in China to European Safety Standards.

DISTRIBUTED BY
MV SPORTS (HONG KONG) LTD
Austin Tower • Room 1001 - 03 1005 - 1007 •
10th Floor • 152 Austin Road • T.S.T. Kowloon •
Hong Kong

MV CUSTOMER SERVICES


We make every effort to ensure that this product reaches you in satisfactory condition. However if you have any queries, need assistance, or find this product defective, please contact our Customer Helpline: customer.services@mvsports.com. Alternatively, you can call on 08708404255.

MAINTENANCE AND STORAGE

Lubricate the chain often to maintain effective movement. Check the bolts, nuts and connection parts often. Do not store in direct sunlight and not external Tighten or re-fix the safety elements and the main parts if necessary. If a defect is noted, do not use the product until it has been repaired.

RECOMMENDED TYRE PRESSURE: 30 PSI. CHECK TYRE PRESSURE EVERY TIME BEFORE USE.

How to remove the chain cover

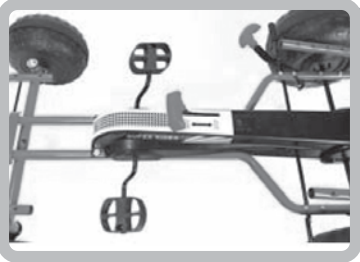


1. Take the clutch handle away.



2. Remove the two screws at the front of the cover.



3. Remove the screw at the rear of the cover.

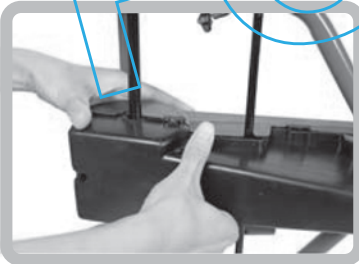



4. Take apart the top and bottom part of the chain cover to access the chain.

HOW TO USE THE BRAKE AND CLUTCH

Reduce your riding speed and then pull the brake handle up and backward to ensure the brakes are applied.



Pull the clutch handle back to the neutral position. This will enable the rider to pedal freeing without moving and can be pushed by an adult.

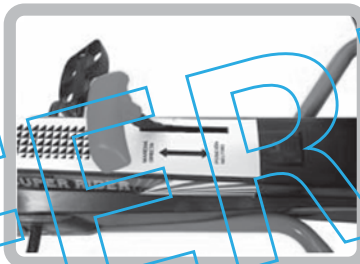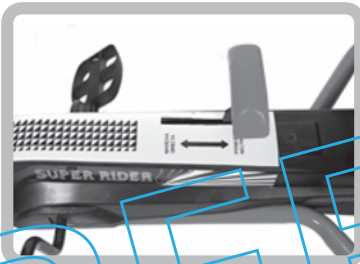

Push the clutch handle forward to engage the chain so that the rider can pedal forward or backward.

