



# **BOARDMAN SLR FEND-OFF INSTALLATION GUIDE**



# INSTALLATION GUIDE

THANK YOU FOR PURCHASING YOUR NEW KINESIS FEND-OFF SLR MUDGUARDS.

## PARTS LIST

- 1. Front mudguard
- 2. Fork spacer
- 3. Rear mudguard
- 4. Rear stays
- 5. Rear mudguard bridge
- 6. Front stays
- 7. End caps x6
- 8. Flaps x2 / Optional

## TOOLS REQUIRED

- Suitable allen keys
- 8mm spanner
- 10mm spanner
- Pliers
- Scissors

**WARNING:** Cycling can be dangerous. Bicycle products should be installed and serviced by a professional mechanic. Never modify your bicycle or accessories. Read and follow all product instructions and warnings including information on the manufacturer's website. Inspect your bicycle before and after every ride. Always wear a helmet.





# GUIDE

1. Remove packaging and assemble your mudguards.

**NOTE:** Your Boardman x Kinesis Fend-Off Mudguards come with precut stays to suit your Boardman SLR Carbon so there is no need to adjust the length.

2. Firstly, remove your front wheel.


3. Identifying the correct orientation for the fork crown spacers – the front mudguard is bolted to the underside of the fork crown using the following bolt, spacers and washer. (25mm bolt / M5 washer / Square Tapered Spacer / Round Tapered Spacer)

4. Place the M5 washer onto the bolt, followed by the Square Tapered Spacer. Put the bolt and washer assembly through the central hole in the front mudguard. Place the Round Tapered Spacer on top of the exposed thread and thread the bolt into the fork crown by hand.


**IMPORTANT:** The Round Tapered Spacer has a profile that will self align in the underside of the fork crown, however, it is important that the thin side of the Spacer faces forward to match the profile of the mudguard as can be seen in this image. The Square Tapered Spacer faces in the opposite direction, with the thin side facing towards the rear of the bike.

5. Fully tighten the bolt making sure the Square Tapered Spacer doesn't move and stays square to the mudguard.


3

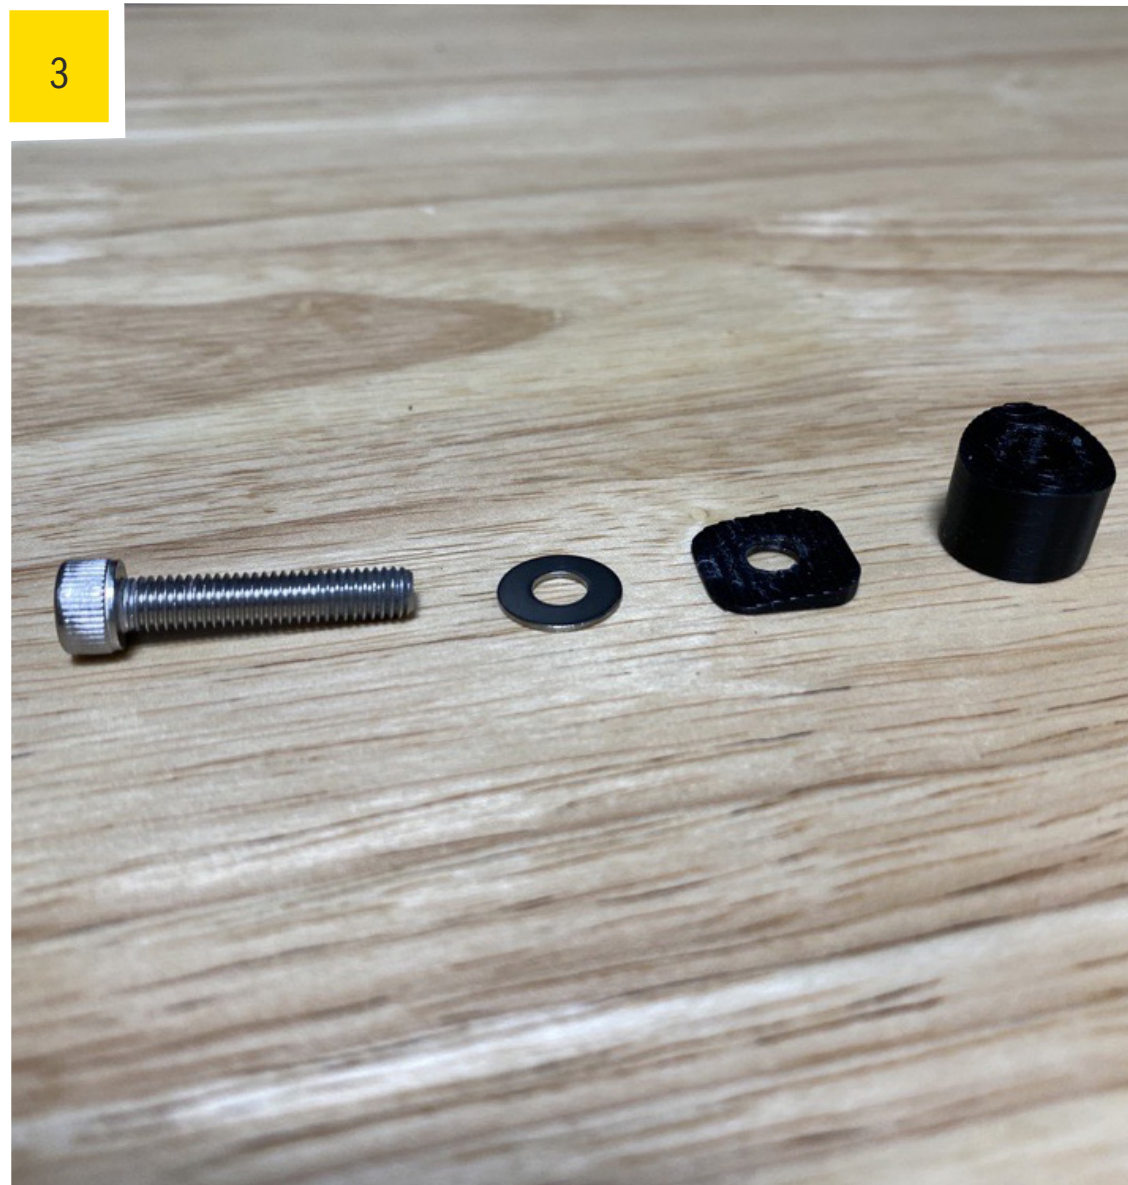

4

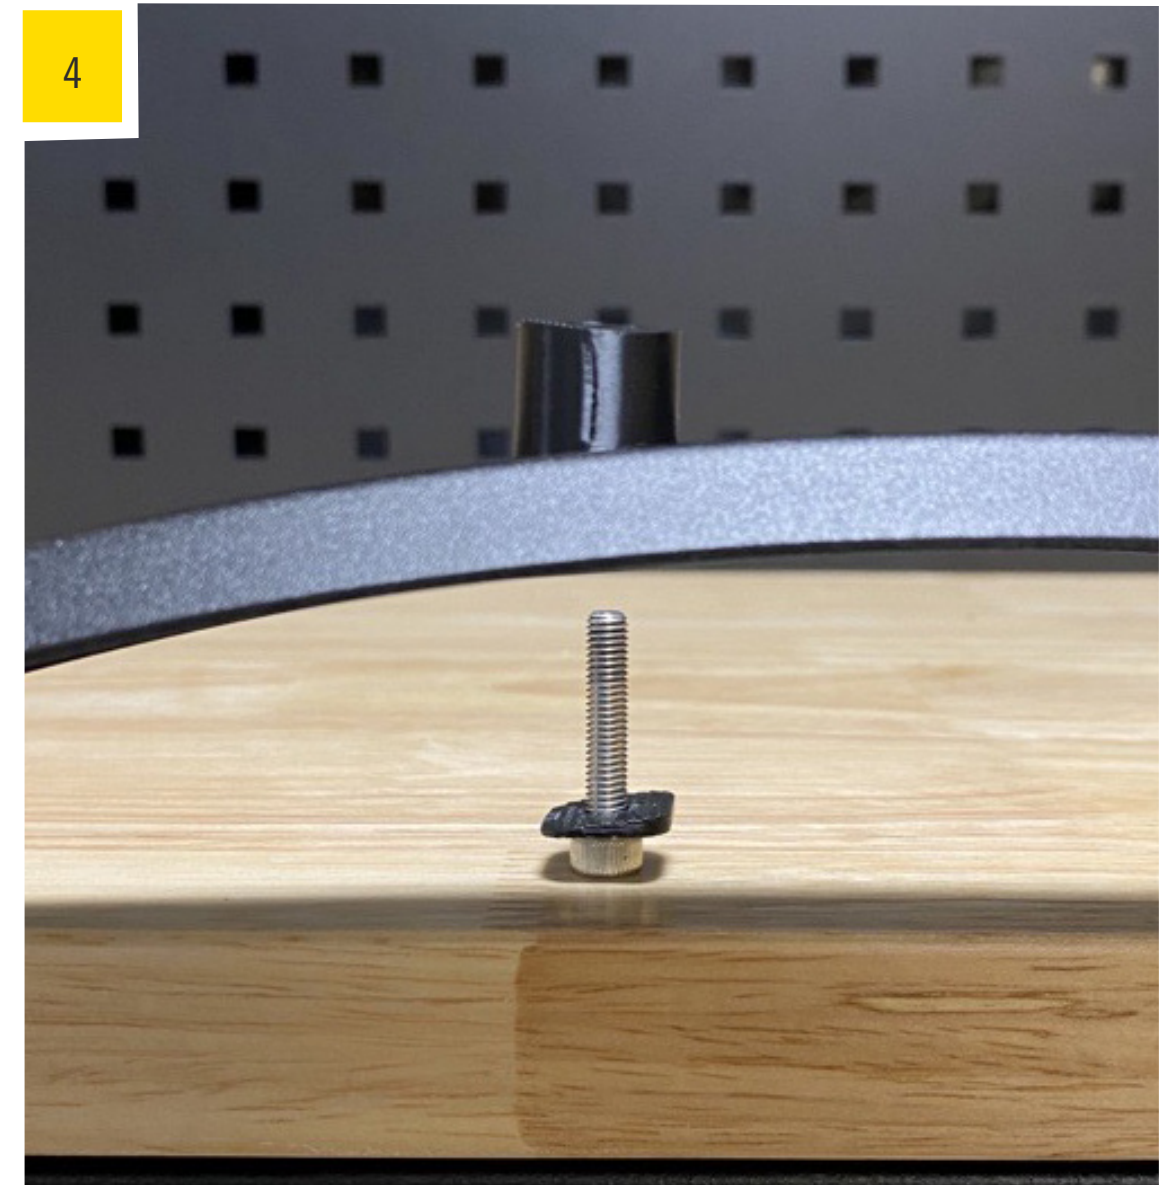

4

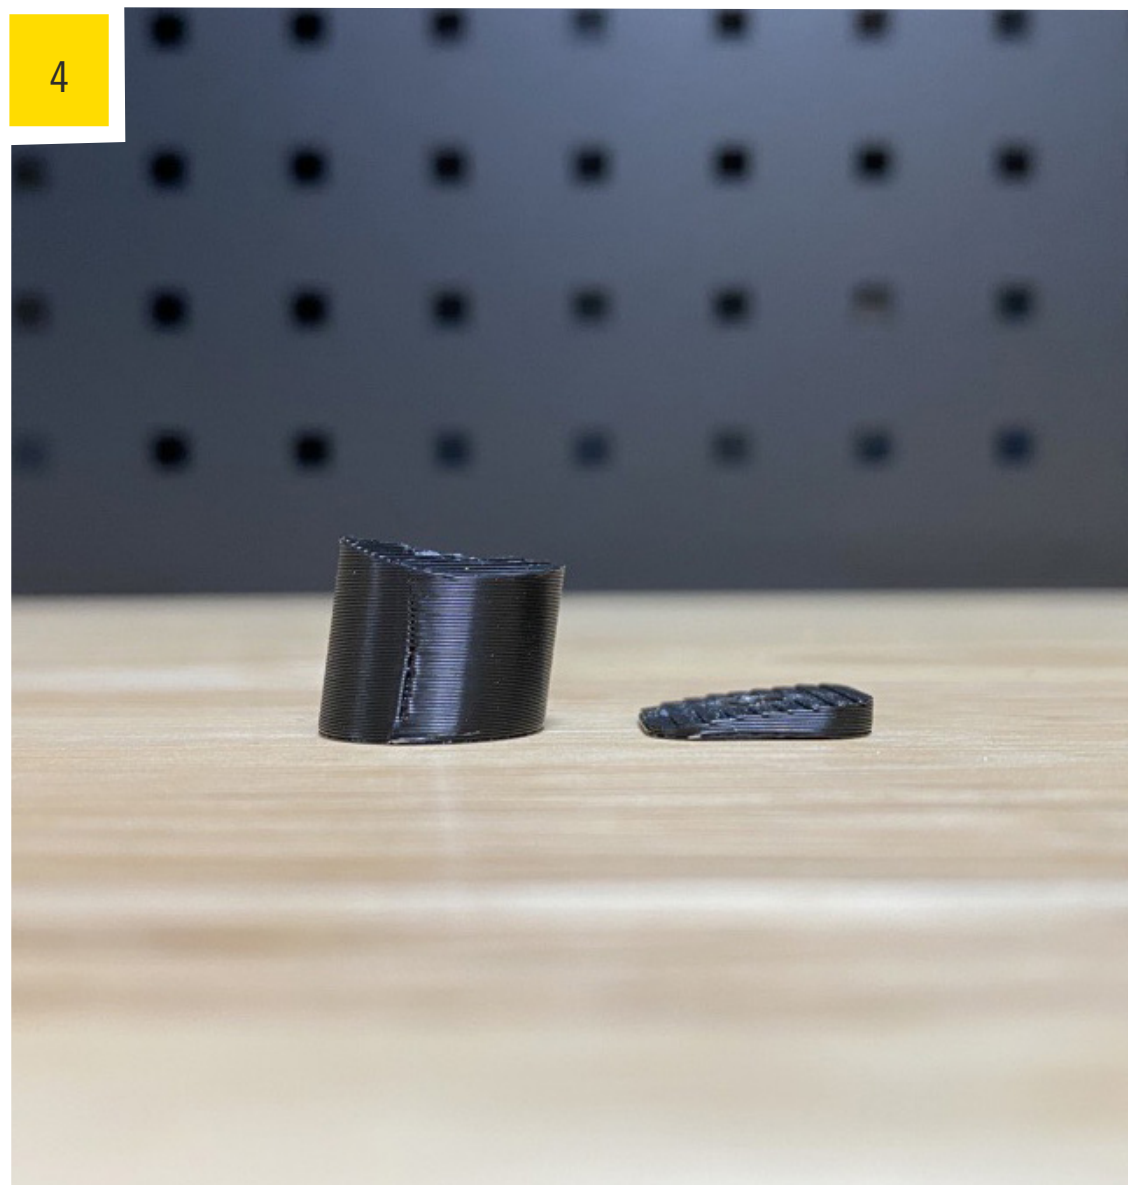

5







# GUIDE

6. Attach the Stays to the mounting points on the inside of the fork legs.
7. Once everything is bolted in place, the Hex nuts can be adjusted with a 10mm spanner to fine tune the final position to give consistent clearance and perfect alignment.
8. Remove the rear wheel.
9. Fit the Mudguard Seatstay Bracket that was supplied with your Boardman SLR bike.
10. Fit the rear mudguard bridge to the mudguard and loosely fold over the tabs to hold it in place. Using the supplied bolt and washers mount the mudguard to the Mudguard Seatstay Bracket. There is no need to fully tighten as this will be adjusted later.

## MUDGUARD BRIDGE

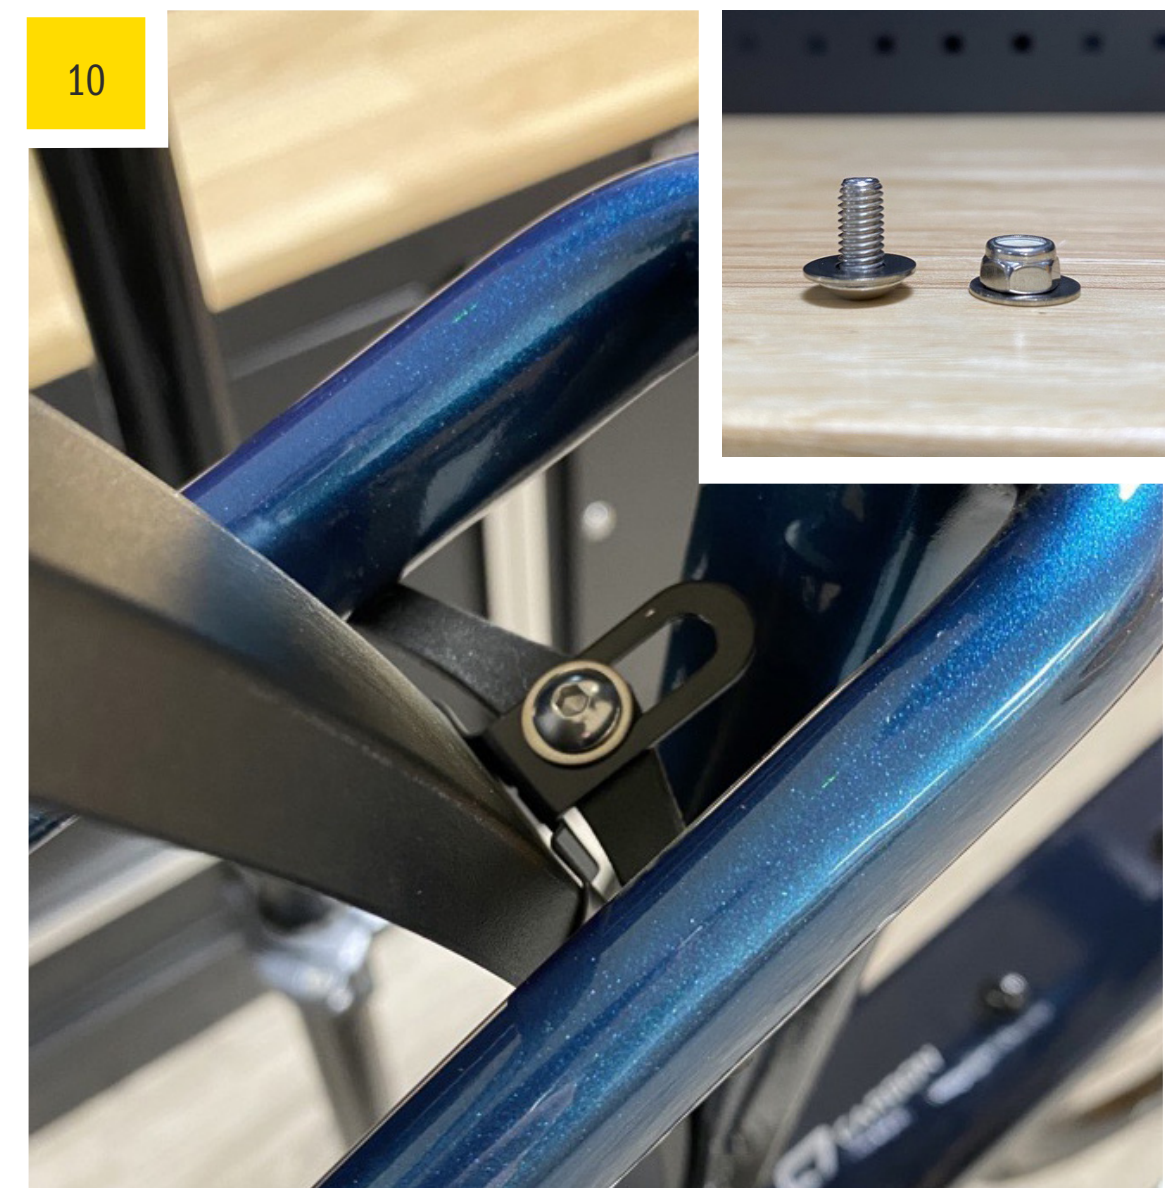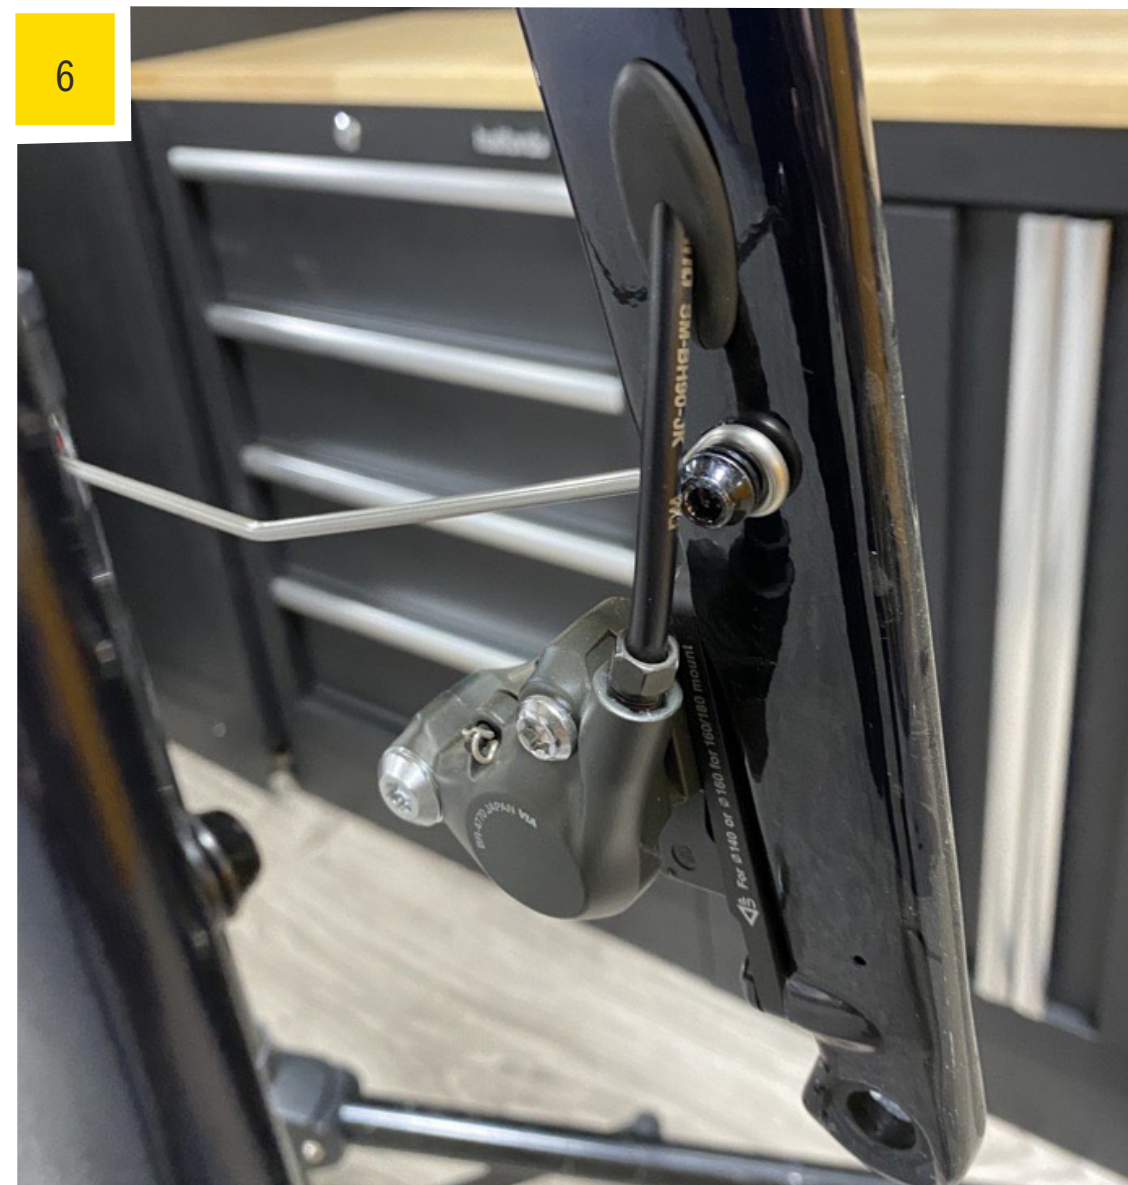



# GUIDE

12. Using the supplied bolt and washer, fit the Mudguard to the chainstay mounting point. The Mudguard should be set in the highest position, the bolt can then be fully tightened.

13. Bolt the Rear Mudguard Stays to the Dropout mounting point.


14. Carefully fold over the Mudguard Bridge taps to fully secure the mudguard.

15. Using the slotted adjustment on the Mudguard Bridge, adjust the height of the mudguard to give consistent clearance between the tyre.


12




14

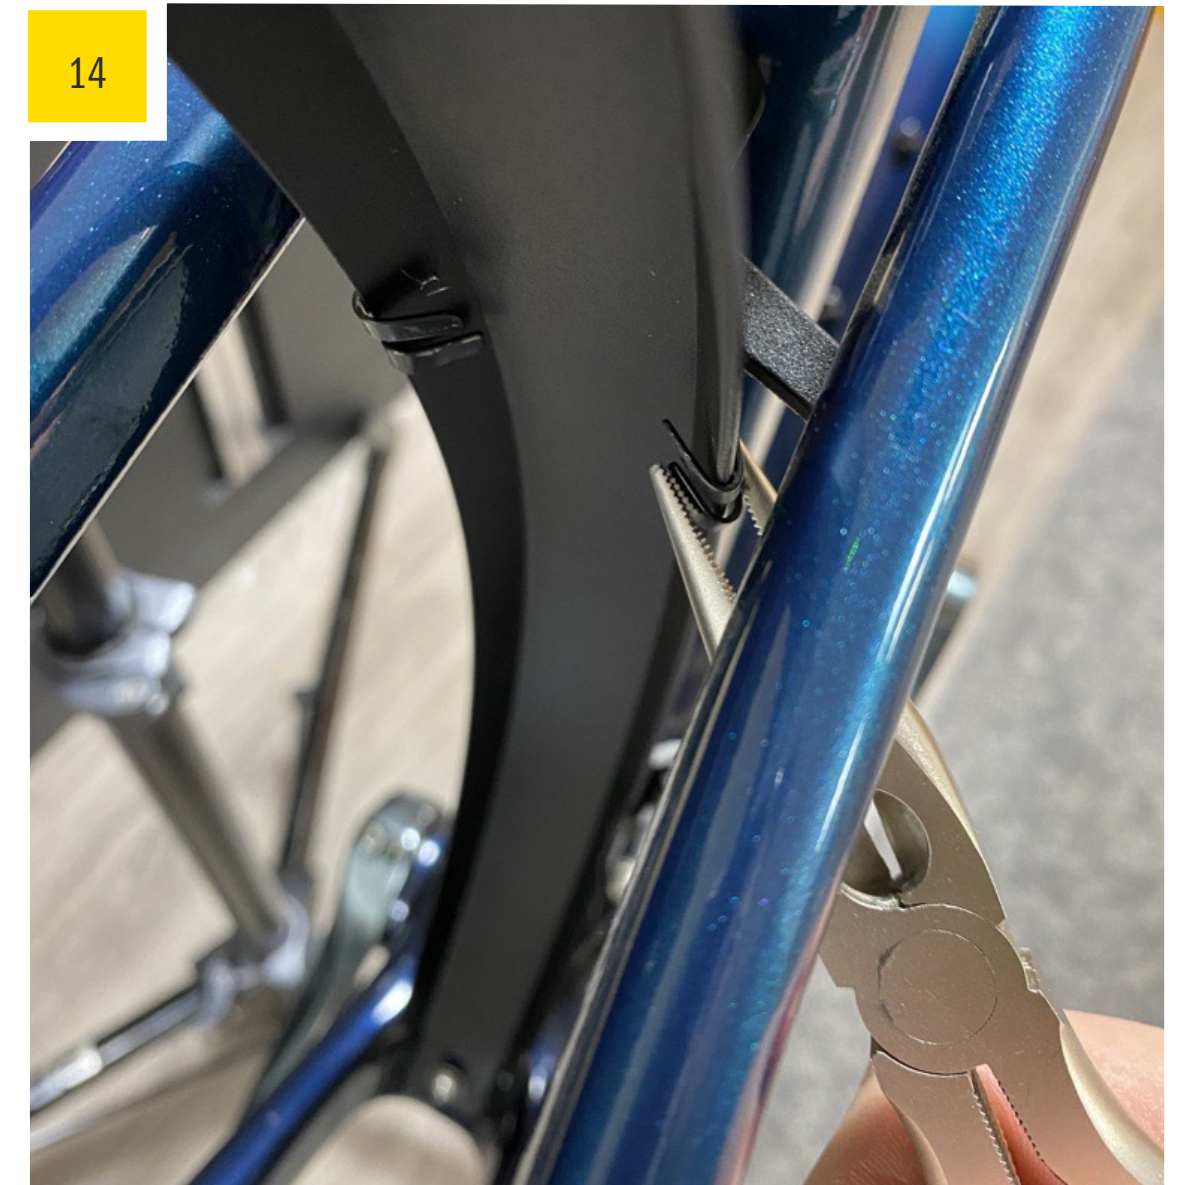

13

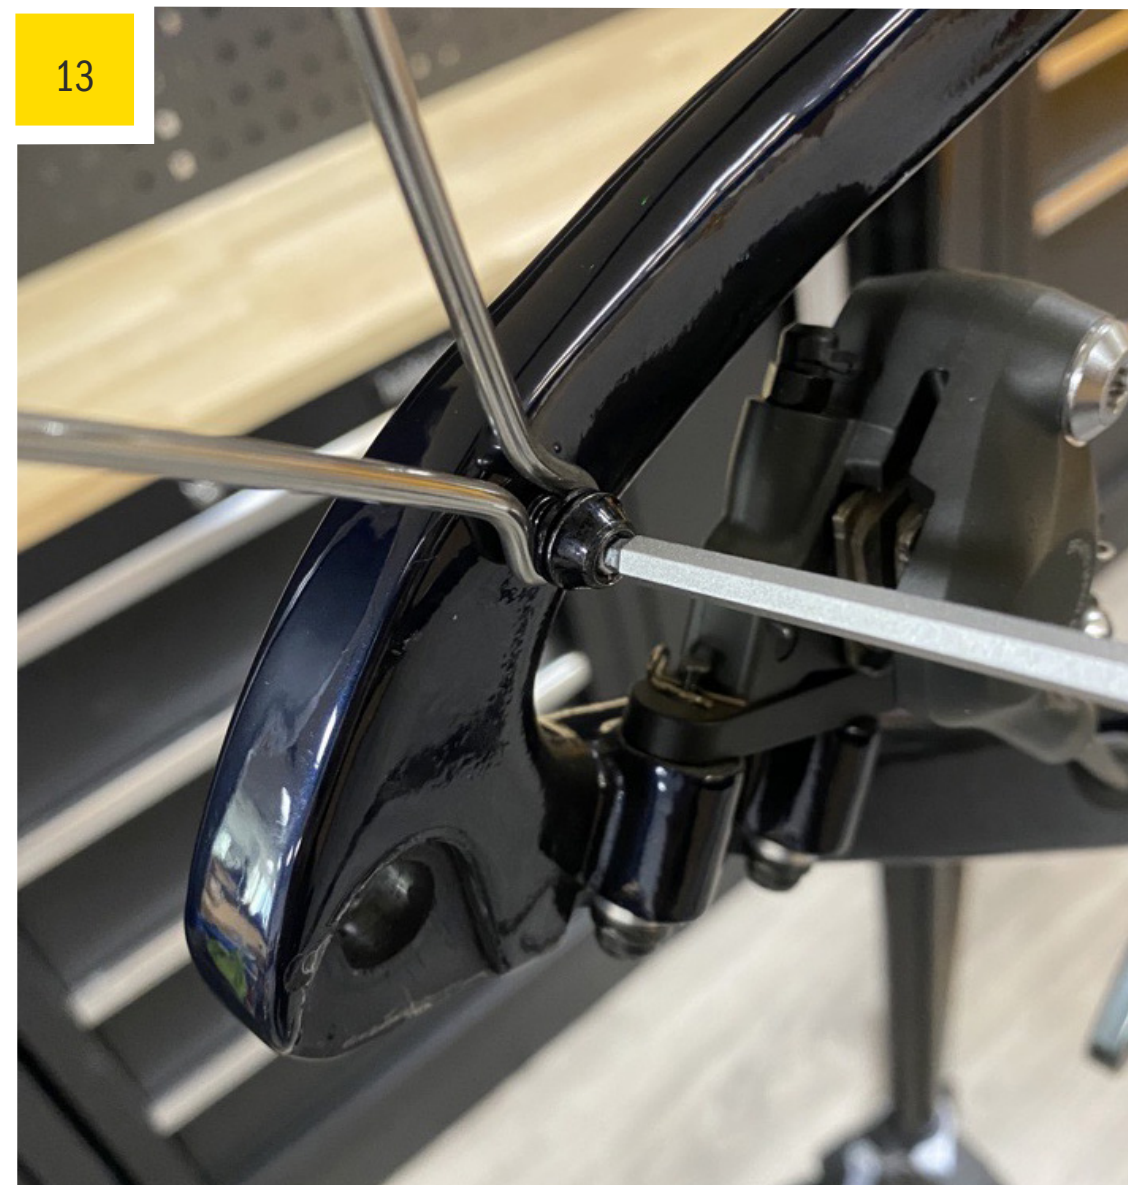

15

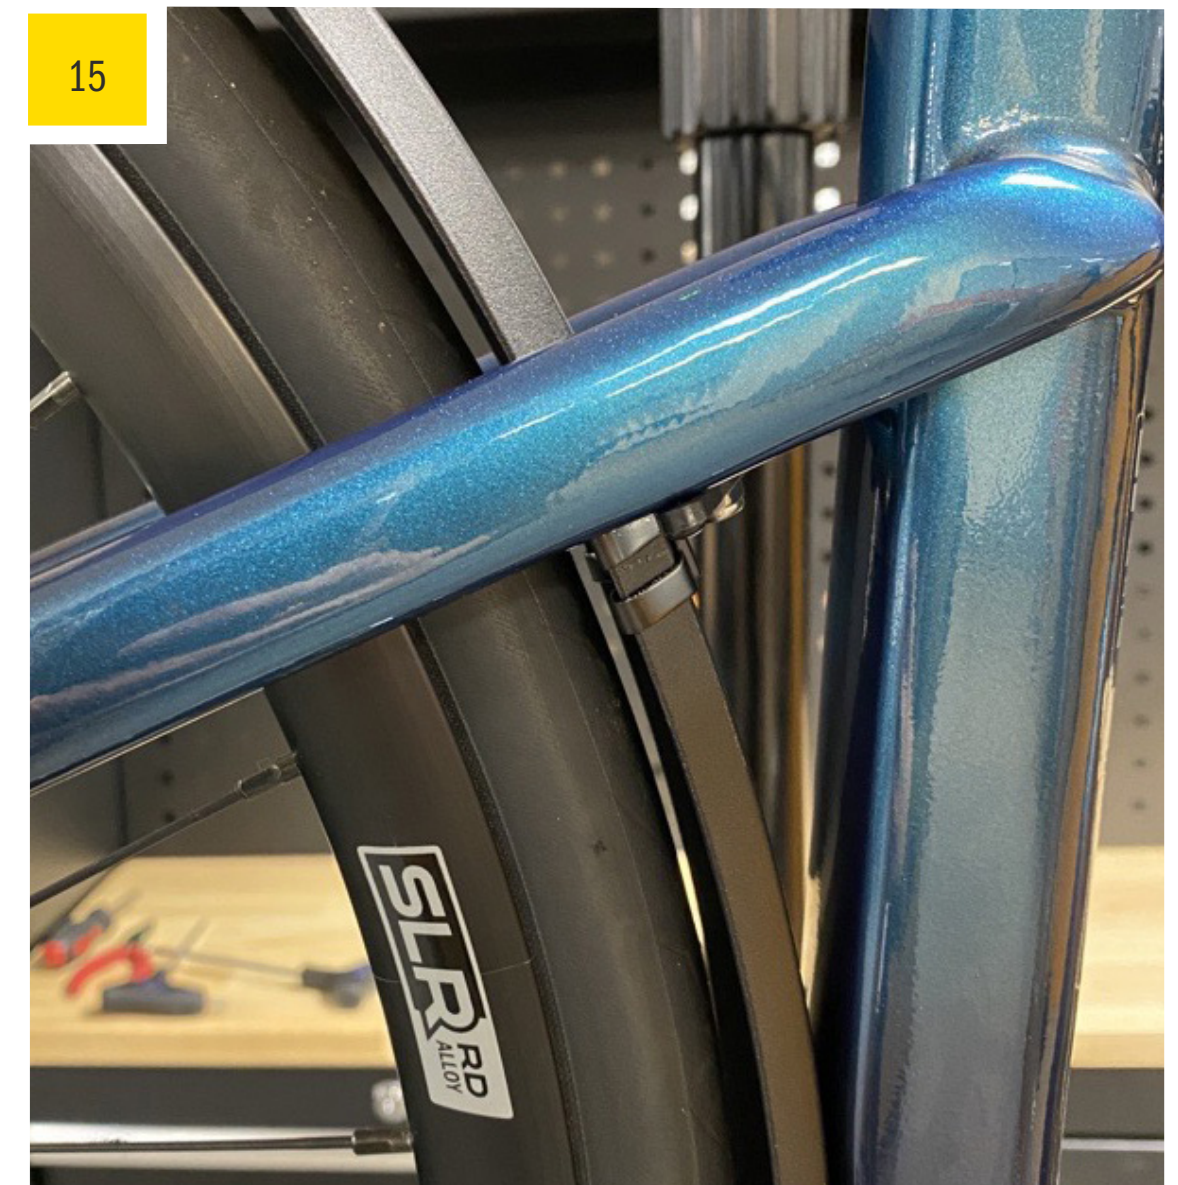




# GUIDE

16. Using a 3mm allen key and 8mm spanner, tighten the bolt to secure the Mudguard Bridge in its final position.

17. Using a 10mm spanner, adjust the rear stays to make sure the mudguard is central and has consistent clearance between the mudguard and tyre.

18. Finally, place the rubber end covers on the ends of the mudguard stays.

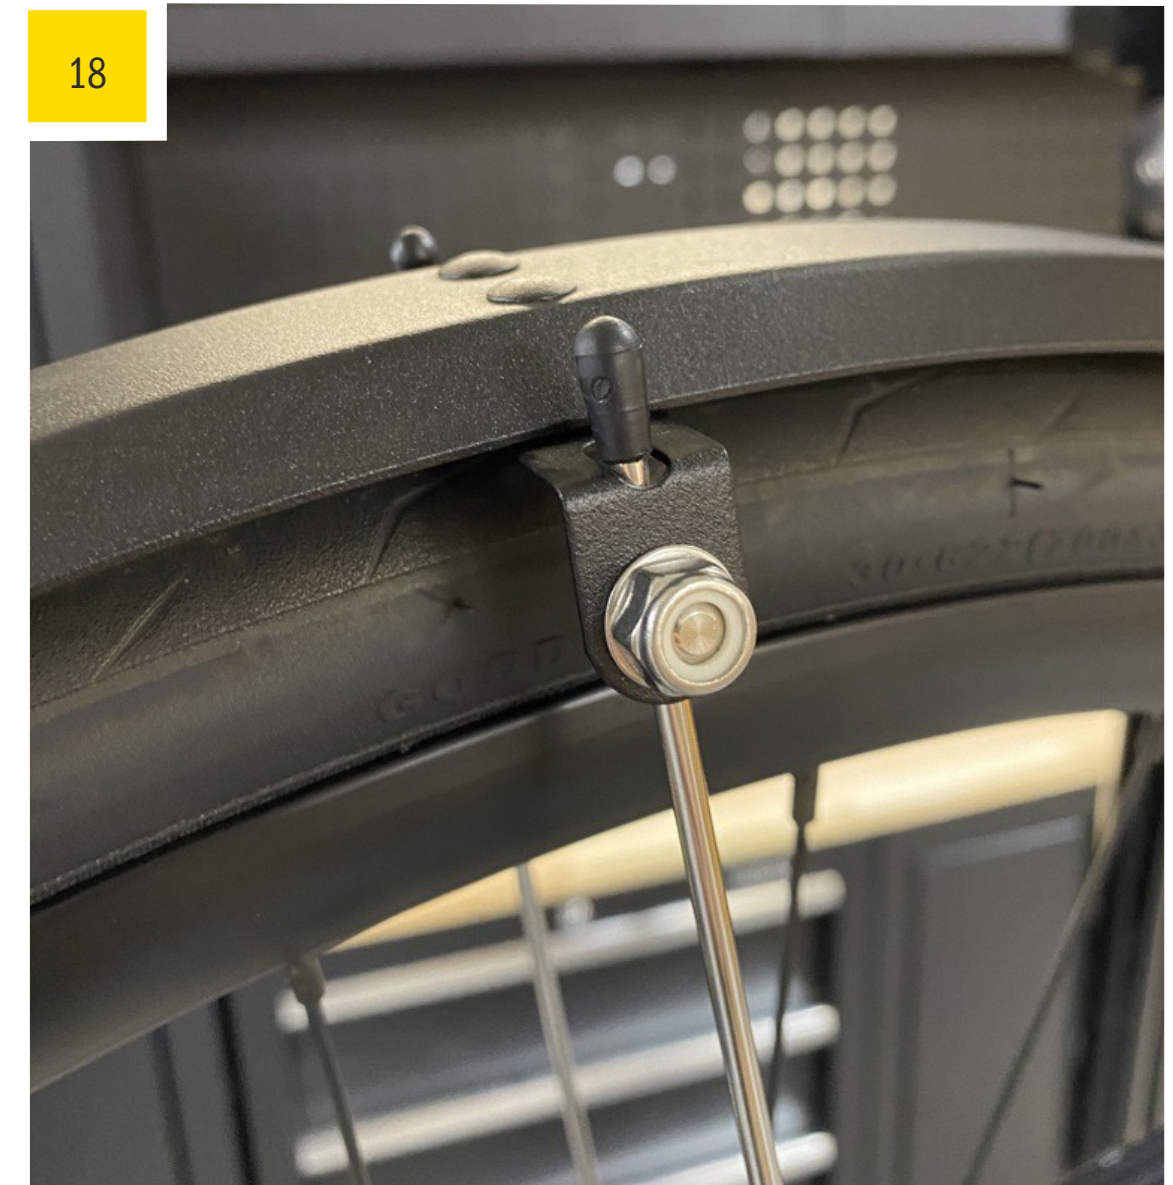





## FURTHER INFORMATION

This Kinesis product is warranted against defects in materials and workmanship for one year from the date of retail purchase of the product, subject to the limitations detailed below. It is always recommended to keep a copy of your dated proof of purchase.

This warranty does NOT cover the following:

- Damage due to improper assembly.
- Damage due to lack of follow-up/routine maintenance or lack of skill, competence or experience of the user or assembler.
- Products that have been modified, neglected, used in competition or for commercial purposes, misused or abused, involved in accidents
- or anything other than normal intended use.
- Installation of components, parts or accessories not originally intended for or compatible with this Kinesis product as sold.
- Normal wear and tear.
- 

This limited warranty applies only to the original purchaser of this Kinesis product and is not transferable. This warranty applies only to products purchased through an authorized dealer or distributor. This limited warranty gives the consumer specific legal rights, which may vary from place to place. This limited warranty does not affect your statutory rights.

### ***NEED MORE INFORMATION, PLEASE GET IN TOUCH***

#### ***FACEBOOK***

BOARDMANBIKES

#### ***INSTAGRAM***

#BOARDMANBIKES

#### ***TWITTER***

@BOARDMANBIKES