




TESTED  
DIN 75302



MAX LOAD 50KG

For use with foot pack  
**PACK 1**  
725329

halfords

<b>KIT 005</b> 725444		<b>Date/Year</b>
CITROEN C5	4 Door	2008->2017
PEUGEOT 207	3 & 5 Door	2006->2017
PEUGEOT 407	4 Door	2004->2010

\*Fit List correct at time of printing (Feb 2020)

To order spare parts please contact your local Halfords Store. Alternatively please contact Halfords customer services on (+44) 0345 504 53 53\*



\*Calls to 03 numbers from private phones (including mobiles) are charged at the local rate, and are included as part of any inclusive call minutes provided by your phone operator.  
Calls may be recorded.

Halfords Customer Services Department,  
Halfords Group plc,  
Washford West,  
Redditch,  
Worcestershire,  
B98 0DE


Visit us at: [www.halfords.com](http://www.halfords.com)




## Components:

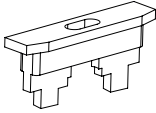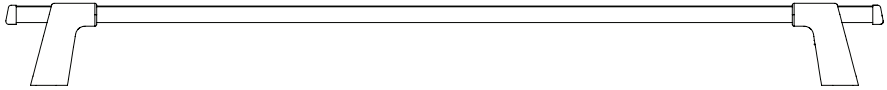


x1  
1210501

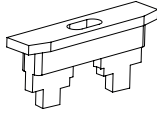

x1  
1210502

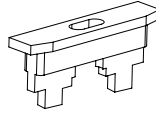


x1  
1210503

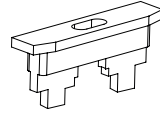


x1  
1210504

x2

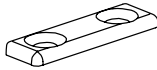


x4  
71009

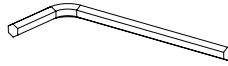

x1  
94013




M6X60

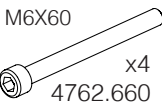

x4

4762.660

M6X65

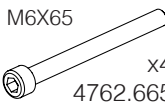

x4

4762.665




x4

211500001




x4

6592.06

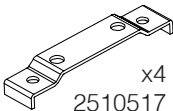

x4

2510517

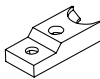

x8

1510507



x8

7380508




x8

5588.06



x8

5589.05

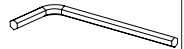



x1

1000.04



# 1

**You will need to add the feet to the roof bars before fitting.**



- 1 Remove the end caps from the bar.
- 2 Remove the covers from the feet.
- 3 Slide the foot pack onto the bar (do not tighten at this stage).
- 4 Replace the end caps back on the bar, leaving the covers off the feet for the next steps.

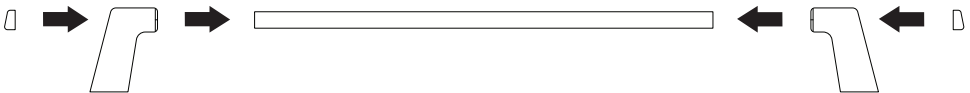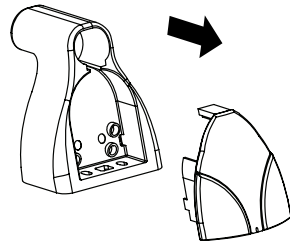


# 2

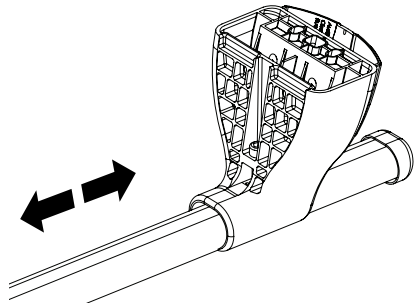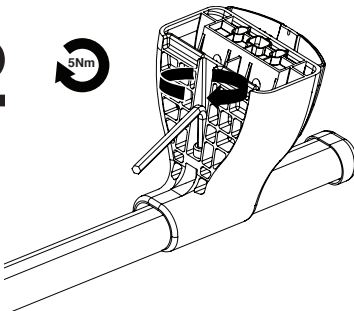




# 3

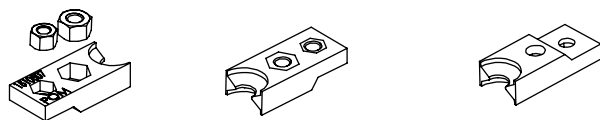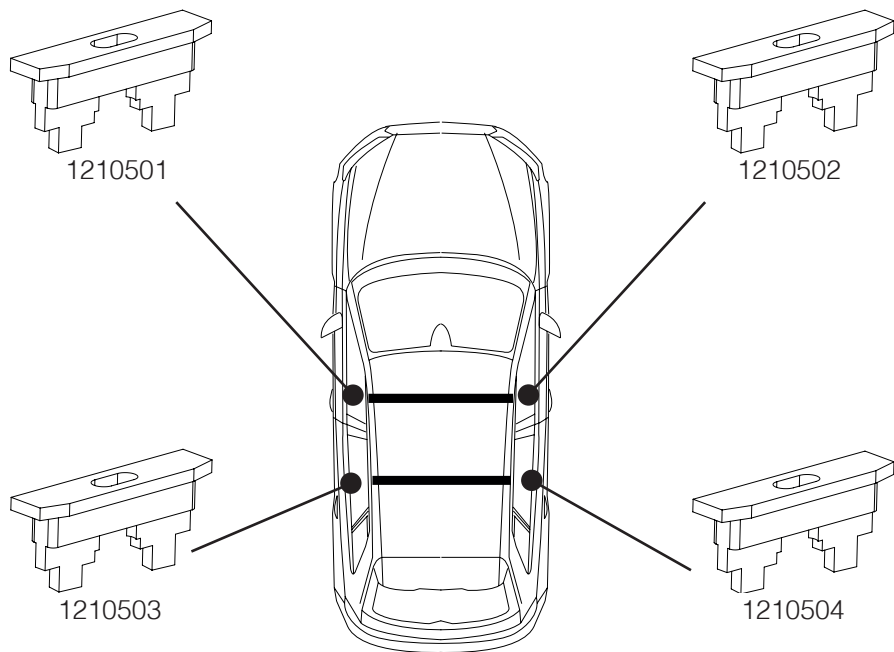


# 4

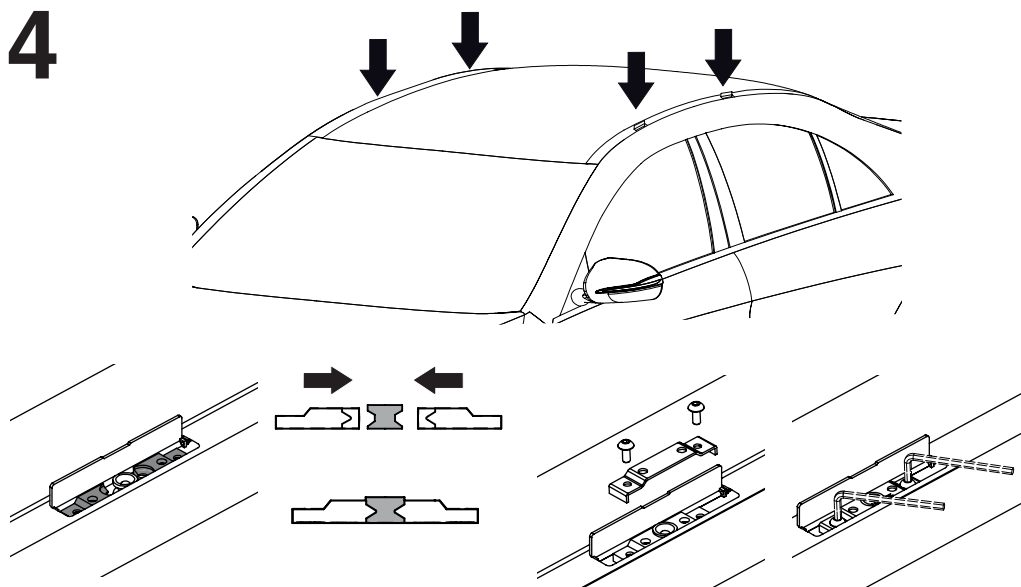


# 5

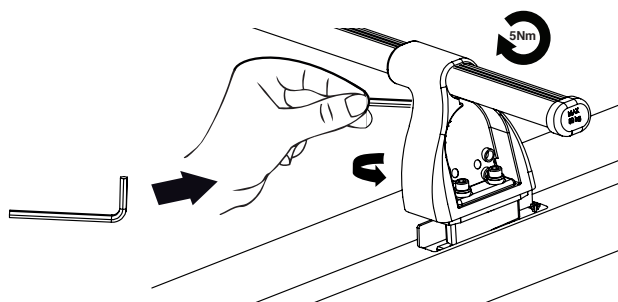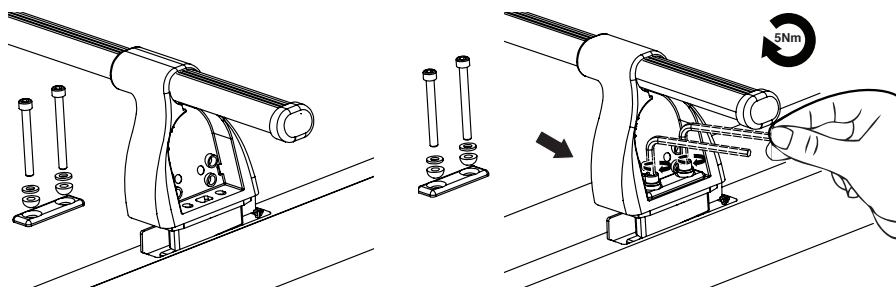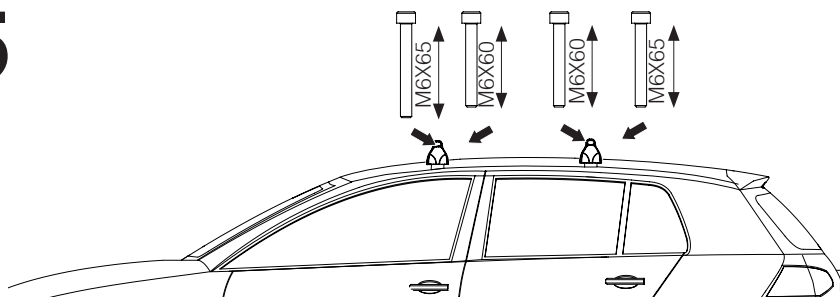



Tighten previously loosened bolt (fig.2) to secure foot to underside of bar

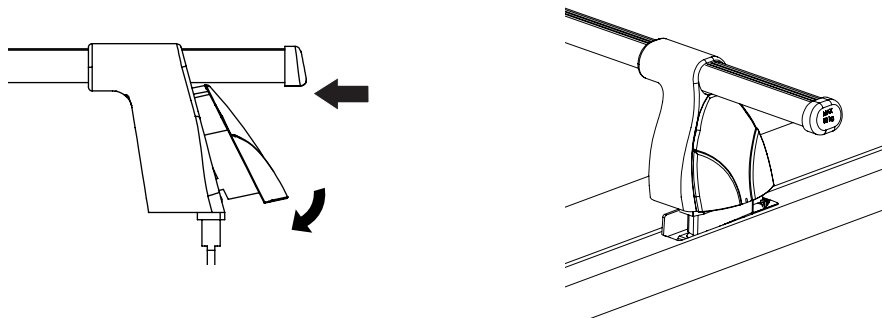

# 6

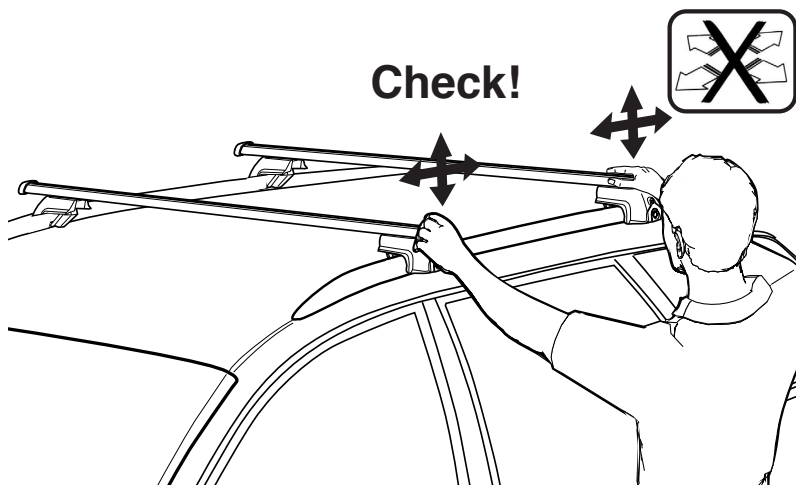

# 7

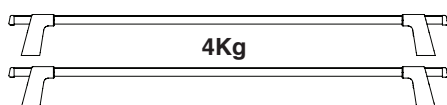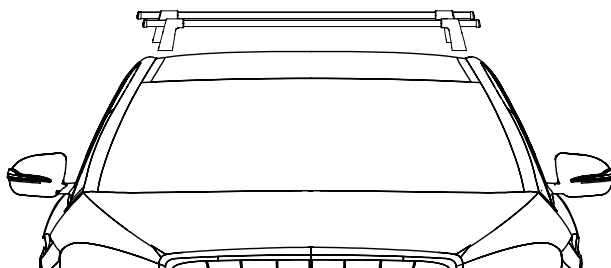

+



=



Do not exceed the total weight permitted on the vehicle roof.  
For disassembly, perform these steps in reverse.




## Installation Notes:

- Fit the roof bars according to the instructions only. Do not assemble or use this product unless you have understood the fitting instructions. If you have any questions, please contact your local store for further information. Check with the instruction manual that all the necessary parts are included.
- Check and make sure that all fastening parts are fixed securely. Please check also that the load is fastened properly by pushing and pulling it. Recheck regularly.
- Please note that some antennas and sunroofs can interfere with the roof bars or accessory when installed and should not be used, if so.
- Follow the instructions thoroughly and do not jump ahead in the sequence (1,2,3, A,B,C... etc).
- Please note there is a measuring guide on the packaging which can be used to align the roof bars when fitting them.

## Important Safety Notes:

- Please retain the Hex key provided and these instructions safely with your car owners manual, for future reference.
- The maximum permissible load evenly distributed over the full width of the bar with a low centre of gravity is 50kg (including the weight of the bars, 4kg). Check the vehicle handbook for fixing location for the roof bar and the maximum permitted load. The maximum permitted roof load must be the lowest quoted figure. And if the vehicle hand book states a maximum of less than 50kg, then that is the maximum permissible load. Even if the vehicle handbook states a maximum of 120kg, the maximum permissible load for these roofbars is 50kg.
- It is your responsibility to ensure that all loads are correctly and safely secured using suitable fixing methods (e.g. strong webbing straps with buckles). Where specialised accessories are available, they should be used (e.g. Cycle Carriers, Ski Holders, etc). If small heavy loads are being carried, load to one side of the bar, not the middle. Never attach loads to roof bars using bungee cords or elasticated straps.
- Before driving and at regular intervals during your journey, check that all securing screws, clamping devices and foot attachments are fully tightened, in accordance with these instructions. Additionally ensure the load is fastened correctly.
- After covering a short distance, all securing devices of both the load and the load carrier must be checked and tightened as required. This must be done at suitable intervals, depending on the nature of the road.
- To prevent damage or discolouration to the paint under the foot pack rubber, we recommend the cleaning of the load bar feet and the vehicle roof prior to fitment. The load bar should be removed at regular intervals to repeat this process.
- When fitted, the roof bars will affect your fuel economy, therefore please remove when not in use.
- Neither the roof bars nor load must project beyond the maximum profile of the vehicle.
- Take care not to drive into low places such as garages or multi-storey carparks when carrying a high load, particularly cycles. Do not drive through an automatic car wash with the load carrier mounted on the vehicle
- Using the bars, especially when carrying a load, will affect the driving and braking characteristics of your car. Larger roof loads may also affect your car's sensitivity to cross winds. For safety reasons, the vehicle must not be driven at maximum speeds. Speed should be matched to the load being transported, to prevailing conditions including the state of the road, the quality of the road surface, the volume of traffic, etc., and of course any speed restrictions in force. Where there are no restrictions in force, we recommend a maximum speed of 65 mph, but the vehicle speed when transporting a load of any kind must be matched to the prevailing conditions.
- Surfboards, boats and large flat objects may produce damaging aerodynamic forces to the vehicle, out of all proportion to their dead weight. We therefore recommend travelling at much reduced speed when carrying these articles. **Where two or more surfboards are carried (or similar items which may produce lifting forces) they should not be carried side by side, but should be stacked one upon the other. They should be secured independently to the front and rear of the vehicle using strap or methods which are capable of withstanding the lifting forces.**
- **When carrying kayaks or canoes ensure that they are secured to the bars and also the front and rear of the vehicle in the upright position.**
- The roof bars must be kept clean and properly maintained, particularly during the winter months when dirt and salt must be removed. Bolts, screws and nuts should be lubricated at suitable intervals, the periodic use of a spray lubricant will keep any lock barrels working freely.
- Always fit the roof bars in accordance with these instructions. The spacing between the front and rear bars must never be less than 700 mm, except where the vehicle mountings determine the spacing.

**IMPORTANT:** This load carrier is especially designed for your car model. Please therefore check with your retailer which type of load carrier is needed when changing your car. Do not use spare parts from other products without checking with your retailer. Do not put the car through an automatic car wash when the load carrier is mounted. The manufacturer takes no responsibility for damage caused by an incorrectly fitted load carrier.

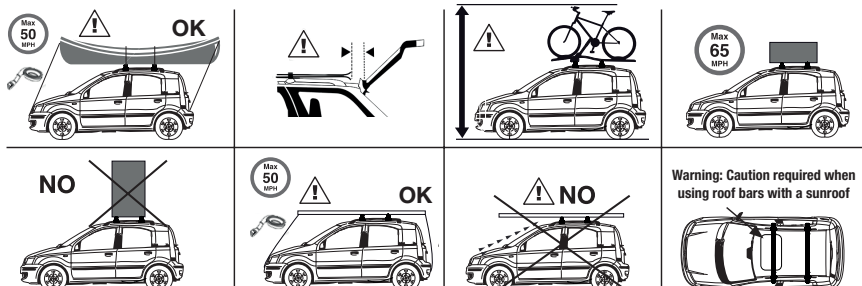

## Made in the EU

Halfords Ltd, Icknield Street Drive, Washford West, Redditch, B98 0DE

Visit us at: [www.halfords.com](http://www.halfords.com)