halfords essentials

User Instructions

Nyala R129 Child Car Seat



Universal belted / 76-105cm ≤18kg i-Size booster seat / 100-150cm

Item Code: 819222

CONTENTS

1. Safety warnings ······	01
2. Structure name	02
3. Installation position ·····	04
4. Seat assembly ·····	05
5. Installation with adult safety belt (76-105cm)	06
6. Instructions for storing the 5-point safety harness	10
7. Installation with adult safety belt (100-150cm)	12
8. Remove/install the cover •••••	14
9. Maintenance	15

WARNING

For height range 76-105cm

This is a universal belted enhanced child restraint system. It is approved according to UN Regulation No.129/03, for use primarily in "universal seating" positions" as indicated by vehicle manufacturers in the vehicle user's manual. If in doubt, consult either the enhanced child restraint system manufacturer or the retailer.



For height range 100-150cm

This is an i-Size booster seat enhanced child restraint system. It is approved according to UN Regulation No.129/03, for use primarily in "i-Size seating positions" as indicated by vehicle manufacturers in the vehicle user's manual. If in doubt, consult either the enhanced child restraint system manufacturer or the retailer.

IMPORTANT - DO NOT USE FORWARD FACING BEFORE THE CHILD'S AGE EXCEEDS 15 MONTHS (refer to instructions).


1. SAFFTY WARNINGS

Thank you for purchasing our child seat. Please ensure you fully read and follow the instructions provided. Please retain instructions for future use. If you have any further questions please contact your local store.



- Before using, please read the instruction manual carefully. The product is a safety product and is only safe when used in accordance with the instruction manual.
- This car seat is compliant with ECE R129/03.
- Do not use a child seat if the vehicle seat is equipped with an active front air bag. This can be dangerous. This does not apply to side airbags.
- It is most important that the seat belt is correctly routed.
- Never make unauthorised modifications or changes to the product,
- Never use the child car seat if it has been in an accident, or if it has become badly worn.
- Do not leave your children in the seat unattended at any time.
- In hot weather the plastic and metal parts of the product may become hot.
 You should cover the seat when not in use, especially when your car is parked in the sun
- Ensure that all luggage and objects likely to cause injury in the event of an accident are properly secured.
- Never use the child car seat without the cover. Only covers approved by the manufacturer can be used.
- The child car seat must be secured when not in use.
- Store this child car seat in a safe place when it is not being used. Avoid placing heavy objects on it.
- Most accidents occur on short trips. Therefore, do not be tempted to avoid using the seat simply because you are not travelling very far.
- Keep the plastic bag away from your child as it could cause suffocation.
- Do not expose the child seat to any corrosive substances. Use a wet towel to clean the plastic body of the child seat,
- Make sure the child car seat belt is adjusted to a suitable position and ensure the belt is not twisted.
- Please ensure the lap belt is worn low down across the pelvis.
- Do not use this product second hand as you may never know its history.
- The rigid items and plastic parts of a child restraint must be located and installed so that they are not liable, during everyday use of the vehicle, to become trapped by a movable seat or in a door of the vehicle.
- Ensure that the seat is not damaged by heavy luggage, movable seats or slamming the car door etc.
- This product is only suitable if the vehicle is fitted with 3-point retractor safety belts, approved to UN/ECE Regulation N0.16 or other equivalent standards.

2. STRUCTURE NAME

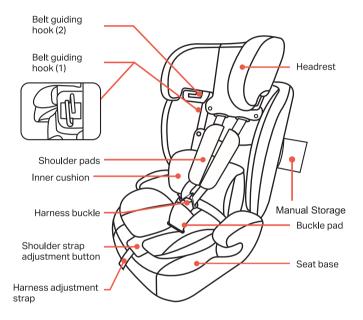

Important: The inner cushion is suitable use for a child with a height range of 76-105cm



Take care of all parts. If any parts are missing please contact the retailer or manufacturer. The seat should not be used if any parts are damaged.

3. INSTALLATION POSITION




This car seat is suitable for conventional use in cars equipped with 3-point seat belts that are fitted in accordance with European Standard (ECE - 16 or equivalent standard). It is not suitable for cars only equipped with 2-point seat belts.




The suitable location for installation in the car is shown on the left:

- O Do not install a child car seat.
- Safe to install child car seat.
- Only suitable for use fitted with 3-point safety belts approved to ECE Regulation No.16 or other equivalent standards.
- B Do not use this child seat in a passenger seat equipped with active airbags.

4. SEAT ASSEMBLY

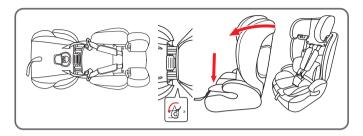

Seat assembly: Lay the seat flat as shown. Hook the backrest into the base and pull it forward until it is secured in an upright position. Secure the buckle on the 5-point safety harness, do this by combining the two buckle pieces together. Insert the buckle ends into the 5-point harness buckle.

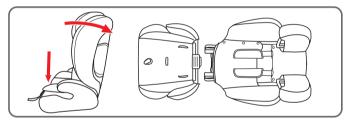


Backrest removal: To disconnect the backrest from the base, push down on the seat base with one hand and push back on the headrest of the seat. Note you will need to push quite hard on the headrest to get it to unclip. Once the seat is flat, the base and backrest can be unclipped.

5. INSTALLATION WITH ADULT SAFETY BELT (76-105CM).

Forward Facing:

Child height 76cm-105cm


Child weight ≤18kg




Whilst pressing the harness adjustment button, pull forwards on the 2 shoulder pads of the 5-point harness.



Press the red button to disengage the buckle.




Remove the inner cushion.




There are 3 snap fasteners on the flap section of the headrest cover, you will need to open these.




Place the child safety seat in the car seat. Extend the car seat belt fully.




The adult seat belt must be routed as shown above. Note the diagonal belt will be sitting behind the headrest cover flap, These instructions are for fitting the seat with the adult belt pulling across the seat from right to left, Firstly, pull the diagonal part of the belt through the headrest, on the right-hand side of the seat it does not need to pass through the hook (shoulder strap guide). Secondly, continue to pull the diagonal belt across the seat, on the left-hand side of the seat the diagonal belt will need to be routed through the hook (shoulder strap guide) on the headrest, this is shown above. Both the diagonal and lap belt will need to be pulled and placed under the child seat armrest.




Once the adult seatbelt is routed correctly, ensure the headrest cover flap is over the top of the seat belt, then refasten the 3 snap fasteners.



Replace all cushions and padding to the seat, including the inner cushion.



Insert the belt end into the buckle until you hear an audible click.



Remove any slack from the seat belt, to do this hold the child seat down with one hand and pull the belt tight with the other hand. Always ensure the seat belt is not twisted.



Place the child in the child seat and pass both arms through the harnesses.



Combine the two buckle pieces together as shown above. Insert the buckle ends into the 5-point harness buckle as shown above.



A "click" sound is heard to indicate the buckle is correctly engaged.




To tighten the harness straps, pull the harness adjustment strap at the base of the seat.




When tightening the harness tighten until the straps are sitting close to your child's chest. Ensure you do not over tighten the straps. The style of the buckle may vary. Pull the shoulder pads as far down as possible on your child shoulders.

Headrest Adjustment



In order to adjust the headrest height there is an adjustment handle on the back of the headrest.



Squeeze and pull the handle up to lift the headrest up, or squeeze and push the handle down to lower the headrest. When adjusting the headrest ensure it is locked in position after adjustment, you will hear it click.

Checking the shouder strap height




Make sure that the harness is at the same height on both your child's shoulders. Otherwise, move the shoulder strap up or down to the correct slot,

6. INSTRUCTIONS FOR STORING THE 5-POINT SAFETY HARNESS WHEN NOT REQUIRED.


(SUITABLE FOR CHILD HEIGHT 100CM-150CM)




Press the red button to disengage the buckle.




Remove the inner cushion as well as the padding around the 5-point harness buckle. Store these safely for any future use.




Open the 3 snap fasteners, these are on the left-hand side of the backrest cover. Once opened, flap the cover to the riaht.



Open the 2 side snap fasteners on the flap section of the headrest cover. You do not need to open the middle snap fastener.




Flap back the cover of the lower part of Once the shoulder straps are the headrest cover. Place the shoulder securely behind the cover, refasten straps including padded covers behind the 2 side snap fasteners on the this part of the cover. Ensure the small headrest cover. side flaps on the backrest cover are also in front of the straps, these have green tags sewn into them. 10






Flap back the cover on the backrest cover, refasten the 3 snap fasteners on the left hand side of this cover.



The buckle itself will be stored in the seat base. In the centre of the seat base cover there is a slot, lift this slot as well as the foam padding underneath the cover. This will reveal a gap in the base where the buckle will slot in. Place the buckle part into this slot and ensure the foam is pushed back down over the top of the buckle.



The metal buckle part of the 5-point harness will also be stored in the base of the seat. On the left and right hand side of the seat base, there are 2 slots under the cover. The buckle will slot into these, ensure you insert the metal part of the buckle in the slot first.



Fully tighten the harness by pulling the harness adjustment strap, the strap can be rolled up and placed in the slot under the cover on the seat base.

7. INSTALLATION WITH ADULT SAFETY BELT (100-150CM).


Forward Facing:

Child height 100cm-150cm


i-Size Booster seat




Place the child safety seat in the car seat. Extend the car seat belt fully.



In order to adjust the headrest height there is an adjustment handle on the back of the headrest.



Squeeze and pull the handle up to lift the headrest up, or squeeze and push the handle down to lower the headrest. When adjusting the headrest, ensure it is locked in position after adjustment, you will hear it click.

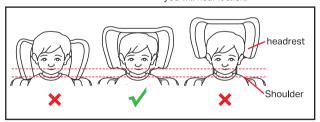

⚠ WARNING:

Please make sure the child's head is positioned in the middle of the headrest, Please make sure the headrest is locked when using this car seat,



Place your child in the seat. Adjust the headrest to a suitable height.



Take the adult seat belt, feed the diagonal belt through the shoulder belt guide as shown above. Pull the belt across the child as shown and then take both the diagonal and lap belts and pull under the armrest. The belt should not be touching your child's neck.




Insert the belt end into the buckle until you hear an audible click.




Remove any slack from the seat belt, always ensure it is not twisted.

8. REMOVE/INSTALL THE COVER


Remove the buckle pad and inner cushion, (see page 8)




Open the 3 snap fasteners, these are on the left-hand side of the back rest cover. Once opened, flap the cover to the right,




Open the 2 snap fasteners on each shoulder strap pad.






On the backrest where the shoulder strap is connected to the backrest, there is a loop, pull the loop down to create a bigger gap. Once the gap is big enough, slide the shoulder pad through this gap.



Remove the headrest cover.




To remove the backrest cover, pull the cover off the seat, starting from the bottom and lifting upwards.


9. MAINTENANCE

How to remove the seat cover for cleaning


First please disassemble the seat.



To remove the backrest cover, pull the cover off the seat, starting from the bottom and lifting upwards.



To remove the headrest cover, unfasten the snap fasteners and pull the cover over and off the headrest, start at the base and lift upwards,



To remove the cover from the booster cushion, starting at the rear of the seat, grip the fabric cover and pull it off the seat.

To reattach the cover, follow reverse instructions for removing the cover.

Cleaning cloth cover

The cover and plastic parts of the child seat can be cleaned with a wet cloth using a mild detergent and warm water. Ensure no soap gets into the buckle or adjusters. Do not use chemical cleaners or bleach on any part of the car seat. Dry thoroughly before use.



HAL7601_131326_819222 - 5057901819229 - Ess Nyala R129 Manual_Repro_OL copy.pdf

CONTACT US

UK: Halfords Ltd, B98 ODE www.halfords.com ROI: Halfords c/o DWF, Dublin 1 www.halfords.ie

Item Code: 819222