




Item Code: 570405 HALFORDS ADVANCED 6 DRAWER TOOL CHEST
570199 HALFORDS ADVANCED 3 DRAWER MIDDLE CHEST
570413 HALFORDS ADVANCED 6 DRAWER TOOL CABINET

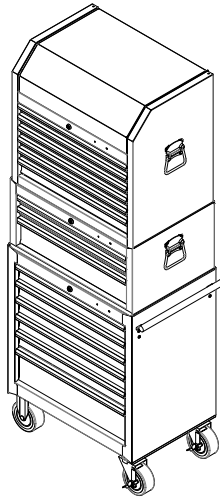

Caution:

**Read and follow all information in this owners manual before use.
Keep for future reference.**

Halfords Ltd.
Redditch
B98 0DE

SAFETY

SAFETY WARNINGS AND CAUTIONS









To avoid personal injury or product damage in use:

- * **Do not** open more than one drawer at a time, this weight transfer could cause the unit to fall towards the user.
- * **Do not** stand on the unit or in/on the drawers.
- * Always ensure the castor locks are on when stationary.
- * Keep this product on an even, level surface to prevent it from becoming unstable.
- * When loading the drawers, place heavier items towards the bottom of the unit.
- * **Do not** exceed the maximum weight per drawer of 30KG.
- * The maximum product weight including contents should be no more than 260kg for chest, 120kg for middle chest and 300kg for cabinet.
- * Not suitable for mounting on a truck bed or any other moving objects.
- * Ensure fingers etc. are clear of the drawers and lid before closing.

When moving this product:

- * Ensure that all of the drawers and top lid are fully closed and locked before moving.
- * When moving on very uneven or un-level surfaces, unload the tools and transport the units separately.
- * Always push and not pull the product on the swivel castor side.


Contact your Halfords local store for service parts.

PART NAME		QUANTITY
	Side handle	1
	M6 washer	4
	M6*12mm screw	4
	M8*20 Bolt	16
	M8 washer	16
	M8 spring washer	16
	Fixed castor	2
	Swivel castor w/ brake	2

ASSEMBLY

SIDE HANDLE ATTACHMENT:

- Slide the handle into the slots on the swivel castor side of the cabinet.
- Fit the 4x M6 screws and washers through the holes and into the threaded section of the handle.

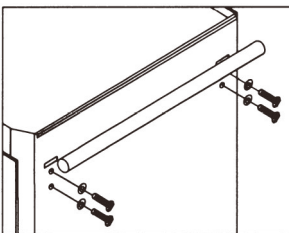


- Tighten all screws.

CASTOR INSTALLATION:

NOTE: The product is heavy, you will need assistance.

- Lay the cabinet down on its back. Use packaging material to protect the paint finish.

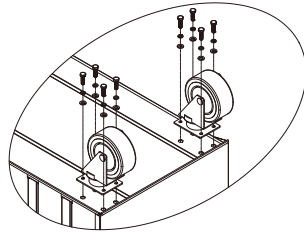


- Mount both swivel castors with brake on the same side of the cabinet as the handle.
- Attach each castor using the M8*20 bolts, spring washers and normal washers (4 per castor).
- Tighten all bolts with a spanner or ratchet.
- Return the cabinet to its upright position.

OPERATION

HOW TO REMOVE DRAWERS:

- Empty the drawer.
- Fully extend the drawer.
- Drawer slides have a black retaining clip. To remove drawer, the retaining clips on slides need to be released by pushing lever up (Left Hand Side of Slide) and down (Right Hand Side of Slide) simultaneously, and sliding drawer out.

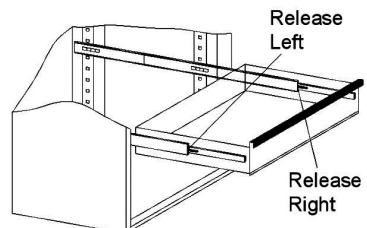

HOW TO RE-INSTALL DRAWERS:

- Fully extend the runners, carefully slot the drawer back into the runner and press into the cabinet. Some resistance is normal however if a lot is felt, remove and realign.



MAINTENANCE

- For castors, use high quality bearing grease, (yearly).
- Lubricate the slides, (twice yearly)
- Lubricate lock with graphite, (yearly).
- Periodically the drawer fronts, drawer trim, and other surfaces should be cleaned with a mild detergent and water.
- Grease and oil can be removed with most standard cleaning fluids. For safety, use a nonflammable cleaning fluid.
- If drawer liners are supplied, it is recommended they are used to protect the finish inside the drawers and to make the drawers easier to clean. The drawer liners may be cleaned with soap and water.

WARRANTY

- Please visit halfords.com/advanced for information on warranty period and full terms and conditions.