


# ***Nyala R129*** ***Isofix*** ***Child Car Seat***

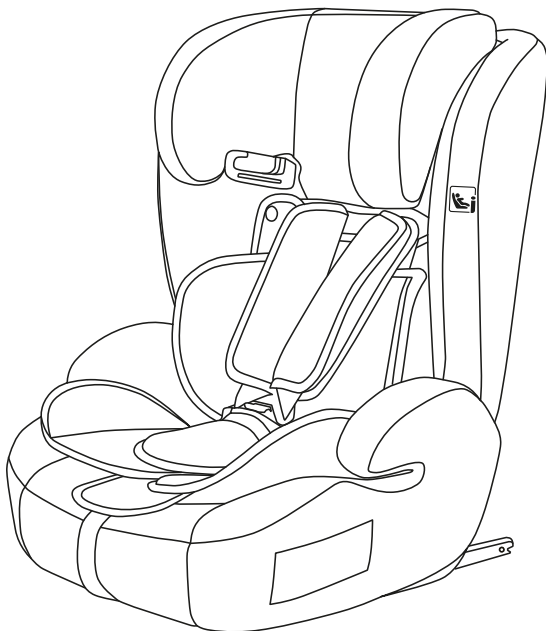

i-Size universal ISOFIX / 76-105cm ≤20kg

i-Size booster seat / 100-150cm

Item Code: 290851

# CONTENTS

1. Safety warnings .....	01
2. Product overview .....	02
3. Installation position .....	04
4. How to install using ISOFIX .....	05
5. Installation with ISOFIX and top tether using 5-point safety harness .....	06
6. Using 5-point safety harness .....	07
7. Instructions for storing the 5-point safety harness when not required..	09
8. Installation with Isofix and 3-point adult seat belt (100-150cm).....	11
9. Uninstalling the seat from the Isofix connectors .....	13
10. Uninstalling the top tether connectors .....	13
11. Maintenance, Remove/install the cover .....	14

## WARNING



### **For height range 76-105cm**

This is an i-Size car seat enhanced child restraint system.

It is approved according to UN Regulation No. 129/03, for use primarily in "i-Size seating positions" as indicated by vehicle manufacturers in the vehicle user's manual.

If in doubt, consult either the enhanced child restraint system manufacturer or the retailer.



### **For height range 100-150cm**

This is an i-Size booster seat enhanced child restraint system.

It is approved according to UN Regulation No.129/03, for use primarily in "i-Size seating positions" as indicated by vehicle manufacturers in the vehicle user's manual.

If in doubt, consult either the enhanced child restraint system manufacturer or the retailer.

**IMPORTANT - DO NOT USE FORWARD FACING BEFORE THE CHILD'S AGE EXCEEDS 15 MONTHS (refer to instructions).**


# 1. SAFETY WARNINGS

Thank you for purchasing our child seat. Please ensure you fully read and follow the instructions provided. Please retain instructions for future use. If you have any further questions, please contact your local store.




- Before using, please read the instruction manual carefully. The product is a safety product and is only safe when used in accordance with the instruction manual.
- This car seat is compliant with ECE R129/03.
- Do not use a child seat if the vehicle seat is equipped with an active front air bag. This can be dangerous. This does not apply to side airbags.
- It is most important that the seat belt is correctly routed.
- Never make unauthorised modifications or changes to the product.
- Never use the child car seat if it has been in an accident, or if it has become badly worn.
- Do not leave your children in the seat unattended at any time.
- In hot weather the plastic and metal parts of the product may become hot. You should cover the seat when not in use, especially when your car is parked in the sun.
- Ensure that all luggage and objects likely to cause injury in the event of an accident are properly secured.
- Never use the child car seat without the cover. Only covers approved by the manufacturer can be used.
- The child car seat must be secured when not in use.
- Store this child car seat in a safe place when it is not being used. Avoid placing heavy objects on it.
- Most accidents occur on short trips. Therefore, do not be tempted to avoid using the seat simply because you are not travelling very far.
- Keep the plastic bag away from your child as it could cause suffocation.
- Do not expose the child seat to any corrosive substances. Use a wet towel to clean the plastic body of the child seat.
- Make sure the child car seat belt is adjusted to a suitable position and ensure the belt is not twisted.
- Please ensure the lap belt is worn low down across the pelvis.
- Do not use this product second hand as you may never know its history.
- The rigid items and plastic parts of a child restraint must be located and installed so that they are not liable, during everyday use of the vehicle, to become trapped by a movable seat or in a door of the vehicle.
- Ensure that the seat is not damaged by heavy luggage, movable seats or slamming the car door etc.
- This product is only suitable if the vehicle is fitted with 3-point retractor safety belts, approved to UN/ECE Regulation N0.16 or other equivalent standards.

## 2. PRODUCT OVERVIEW

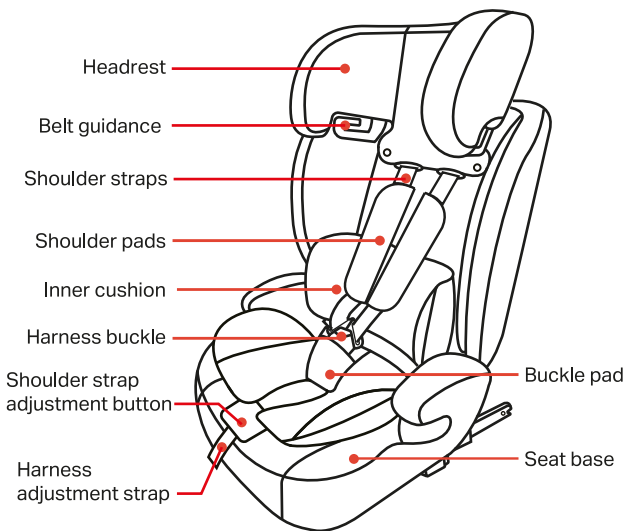

**Important:**

The inner cushion is suitable use for a child with a height range of 76-87cm.

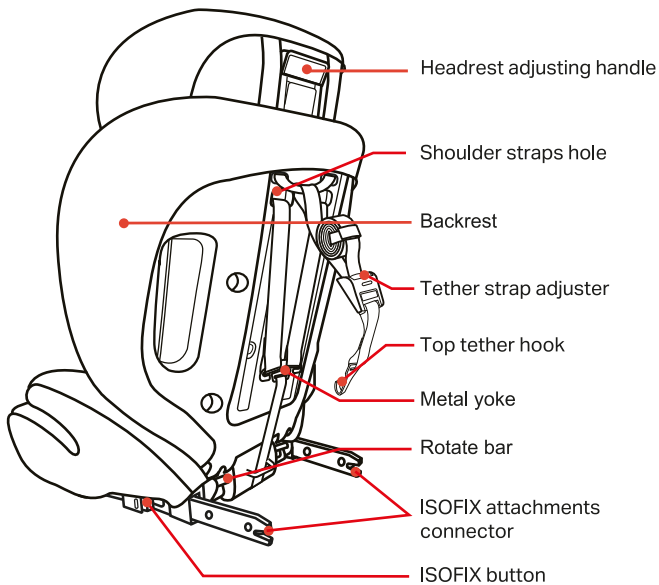


Take care of all parts.

If any parts are missing please contact the retailer or manufacturer.

The seat should not be used if any parts are damaged.


### 3. INSTALLATION POSITION

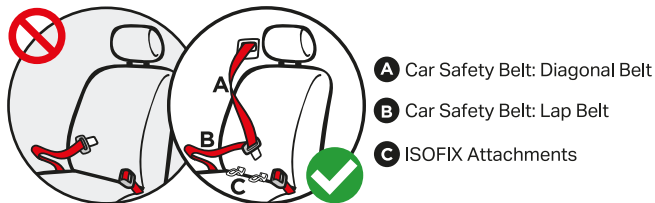

This car seat is suitable for conventional use in cars equipped with 3-point seat belts that are fitted in accordance with European Standard (ECE - 16 or equivalent standard). It is not suitable for cars only equipped with 2-point seat belts.




The suitable location for installation in the car is shown on the left:

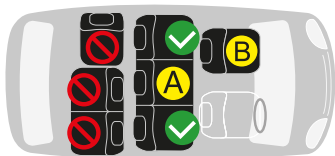

- ⊘** Do not install a child car seat.
- ✓** Safe to install child car seat.
- A** Only suitable for use fitted with 3-point safety belts approved to ECE Regulation No.16 or other equivalent standards.
- B** Do not use this child seat in a passenger seat equipped with active airbags.





## 4. HOW TO INSTALL USING ISOFIX


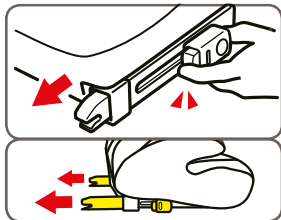


Using one hand, grasp the ISOFIX release handle and with the other hand, pull out the ISOFIX connecting arm.

You will need to do this separately for each ISOFIX securing arm.

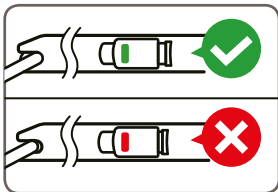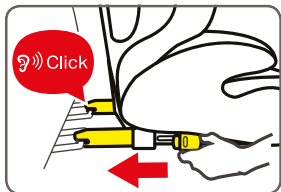

Push the ISOFIX connectors directly into the anchorages on both sides until an audible "click" is heard on both sides. After this the green indicators should be seen.

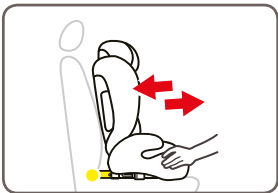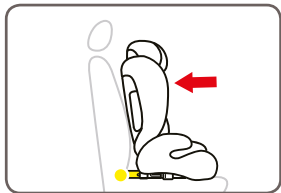

There are various adjustment positions for the ISOFIX arms, always ensure both sides are set to the same position. Push the child seat back until it contacts the vehicle seat back. If the seat moves or the arms pull from the ISOFIX points, repeat the above steps and install again.



## 5. INSTALLATION WITH ISOFIX AND TOP TETHER USING 5-POINT SAFETY HARNESS (76-105cm)





**Forward facing:**

**Child height 76cm-105cm**



**Child weight  $\leq 20\text{kg}$**

Install the seat using ISOFIX, see separate instructions for how to do this.

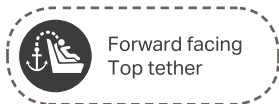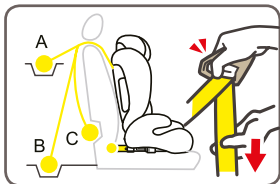

Identify the top tether fixing location point in your specific vehicle. Refer to the above image to help identify or refer to your vehicle manufacturers handbook.

Pull the top tether out and press the tether release button to extend the strap until it is long enough to hook on to the top tether anchorage point behind the vehicle seat.

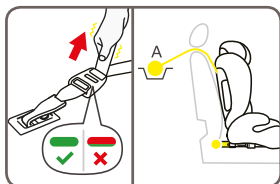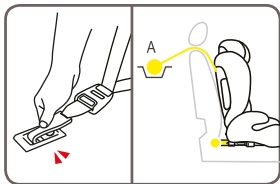


Hook the top tether strap onto the anchorage point. There may be more than one top tether anchorage point. Please select the appropriate one.

Pull the end of the top tether strap to tighten.

Once the strap is fully tight, the indicator on the top tether will turn from red to green. Once hooked on, keep tightening the strap until the tether turns to green.


## 6. USING 5-POINT SAFETY HARNESS

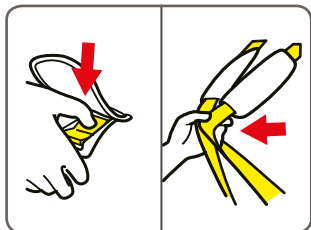

Whilst pressing the harness adjustment button, pull forwards on the 2 shoulder pads of the 5-point harness.



Place the child in the child seat and pass both arms through the harnesses.

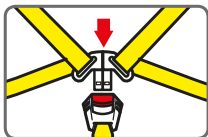

Combine the two buckle pieces together and then insert the buckle ends into the 5-point harness buckle, as shown above. A "click" sound is heard to indicate the buckle is correctly engaged.




To tighten the harness straps, pull the harness adjustment strap at the base of the seat.




When tightening the harness tighten until the straps are sitting close to your child's chest. Ensure you do not over tighten the straps. The style of the buckle may vary. Pull the shoulder pads as far down as possible on your child's shoulders.

## Headrest adjustment

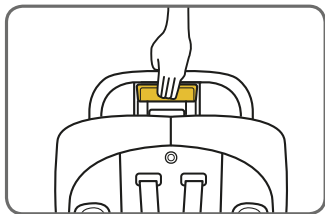


In order to adjust the headrest height there is an adjustment handle on the back of the headrest.

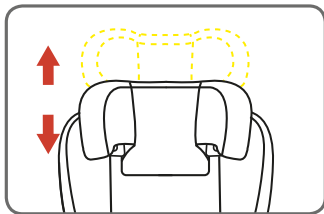


Squeeze and pull the handle up to lift the headrest up, or squeeze and push the handle down to lower the headrest.

When adjusting the headrest ensure it is locked in position after adjustment, you will hear it click.


## Checking the shoulder strap height

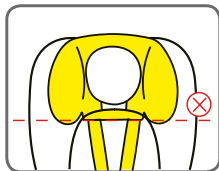

No - Too low

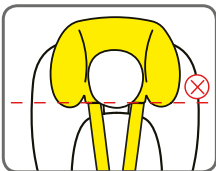


No - Too high

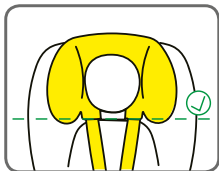


Yes - Correct

Make sure that the harness is at the same height on both your child's shoulders. Otherwise, move the shoulder strap up or down to the correct slot.


## 7. INSTRUCTIONS FOR STORING THE 5-POINT SAFETY HARNESS WHEN NOT REQUIRED (REMOVE FOR CHILD HEIGHT 100-150cm)

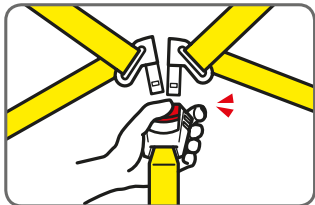


Press the red button to disengage the buckle.

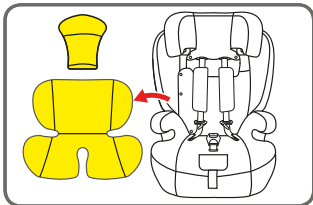


Remove the inner cushion as well as the padding around the 5-point harness buckle. Store these safely for any future use.

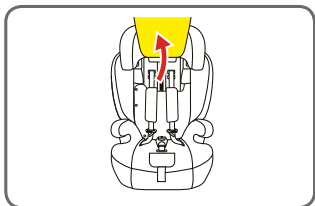


Raise the headrest and lift the backrest cover.

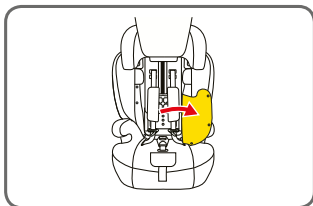

Open the 3 snap fasteners, these are on the left-hand side of the backrest cover. Once opened, flap the cover to the right.

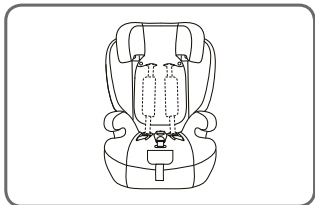


The shoulder straps including padding will sit behind the backrest cover. Once you have put these behind the cover, flap back the backrest cover over the top of the straps, and refasten the snap fasteners on the left hand side.

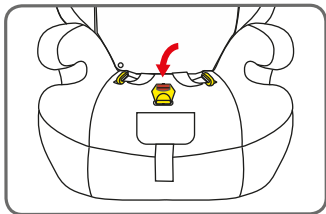


The buckle itself will be stored in the seat base. In the centre of the seat base under the cover there is a slot, lift the seat base cover as well as the foam padding underneath the cover.

This will reveal a gap in the base where the buckle will slot in. Place the buckle part into this slot and ensure the foam is pushed back down over the top of the buckle.

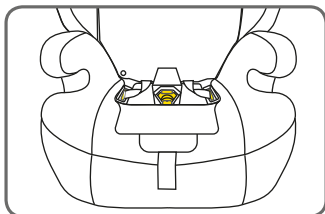


The metal buckle part of the 5-point harness will also be stored in the base of the seat. On the left- and right-hand side of the seat base, there are 2 slots under the cover. Lift the seat base cover and the buckle pieces will slot into these, ensure you insert the metal part of the buckle in the slot first and place the seat base cover back over the top.

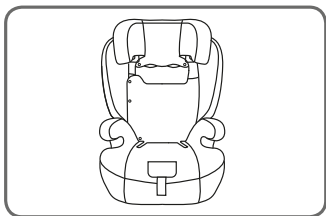

Fully tighten the harness by pulling the harness adjustment strap, the strap can be rolled up and placed in the slot under the cover on the seat base.

## 8. INSTALLATION WITH ISOFIX AND 3-POINT ADULT SEAT BELT (100-150cm)

YOU WILL NEED TO REMOVE / STORE THE 5-POINT SAFETY HARNESS.

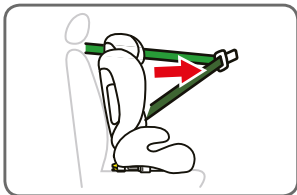


**Forward facing:**


**Child height 100cm-150cm**

**i-Size booster seat**


Place the child safety seat in the car seat.  
Extend the car seat belt fully.

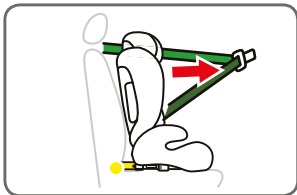


Install the seat using the ISOFIX connectors, see separate instructions of how to do this. Please note, for this height range, the seat can be fitted using only the adult belt without ISOFIX connectors, if doing this please ignore this step and follow the remaining steps. It is recommended for extra security to always use ISOFIX connectors where possible.

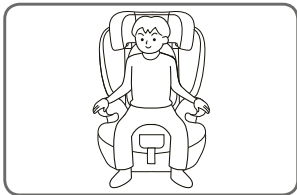


Place your child in the seat. Adjust the headrest to a suitable height.

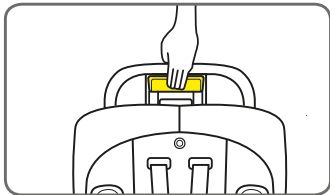

In order to adjust the headrest height there is an adjustment handle on the back of the headrest.

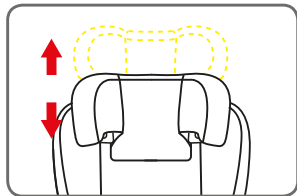


Squeeze and pull the handle up to lift the headrest up, or squeeze and push the handle down to lower the headrest. When adjusting the headrest, ensure it is locked in position after adjustment, you will hear it click.

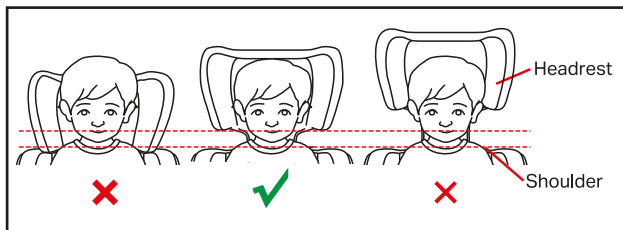


**⚠ WARNING:**

Please make sure the child's head is positioned in the middle of the headrest. Please make sure the headrest is locked when using this car seat.

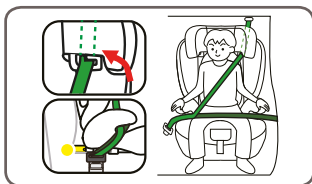


Take the adult seat belt, feed the diagonal belt through the shoulder belt guide as shown above. Pull the belt across the child as shown and then take both the diagonal and lap belts and pull under the armrest. The belt should not be touching your child's neck.

Insert the belt end into the buckle until you hear an audible click.

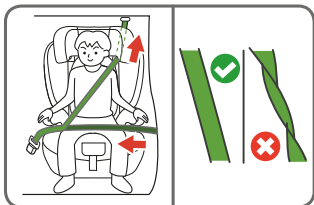

Remove any slack from the seat belt, always ensure it is not twisted.

## 9. UNINSTALLING THE SEAT FROM THE ISOFIX CONNECTORS

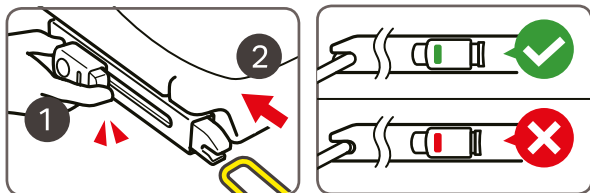


With one hand, push the child seat towards the vehicle seat back. With the other hand pull the ISOFIX release handle to extend the ISOFIX arms. Depress the unlock buttons to disengage the seat from the ISOFIX anchorage points.


Note you will need to do this for each ISOFIX arm individually. The indicators should now show as red. Pull the child seat away from the vehicle back.

Once you have removed the seat from the car, with one handle, grasp the ISOFIX release handle and with the other hand, push the arm back towards the child seat. You will need to do this for both sides individually.

## 10. UNINSTALLING THE TOP TETHER CONNECTORS

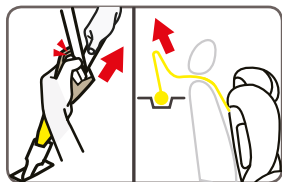

Press the top tether release button and pull the strap to loosen it.

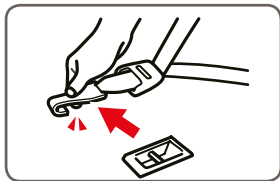


Remove the hook from the anchorage point by squeezing the clip.




## 11. MAINTENANCE, REMOVE/INSTALL THE COVER

To clean the car seat cover, remove the seat cover from the seat base first. Follow these instructions for how to remove the cover.


Remove the buckle pad and inner cushion. (see page 9)

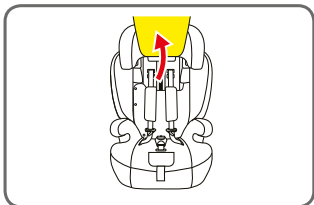


Raise the headrest and lift the backrest cover.

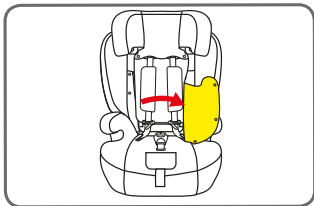


Open the 3 snap fasteners, these are on the left-hand side of the back rest cover. Once opened, flap the cover to the right.

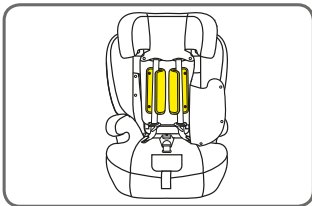


Open the 2 snap fasteners on each shoulder strap pad.

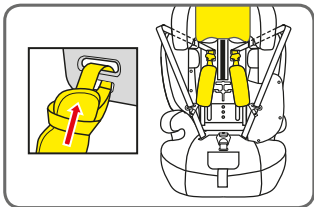


On the backrest where the shoulder strap is connected to the backrest, there is a loop, pull the loop down to create a bigger gap. Once the gap is big enough, slide the shoulder pad through this gap.

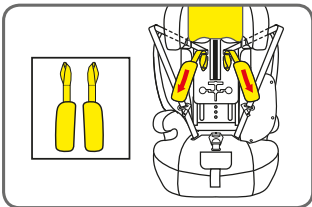

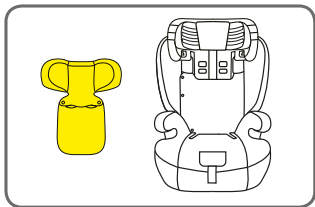

Remove the headrest cover.

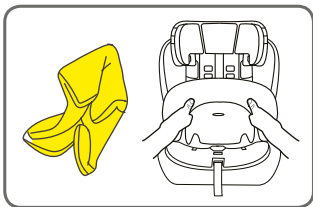

To remove the backrest cover, pull the cover off the seat, starting from the bottom and lifting upwards.

To reattach the cover, follow reverse instructions for removing the cover.

### Cleaning cloth cover

The cover and plastic parts of the child seat can be cleaned with a wet cloth using a mild detergent and warm water. Ensure no soap gets into the buckle or adjusters. Do not use chemical cleaners or bleach on any part of the car seat. Dry thoroughly before use.





**CONTACT US**

**UK:** Halfords Ltd, B98 0DE  
[www.halfords.com](http://www.halfords.com)

**ROI:** Halfords c/o DWF, Dublin 1  
[www.halfords.ie](http://www.halfords.ie)

**Item Code: 290851**