


**halfords
essentials**

User Instructions

***Impala
R129
Child Car Seat***

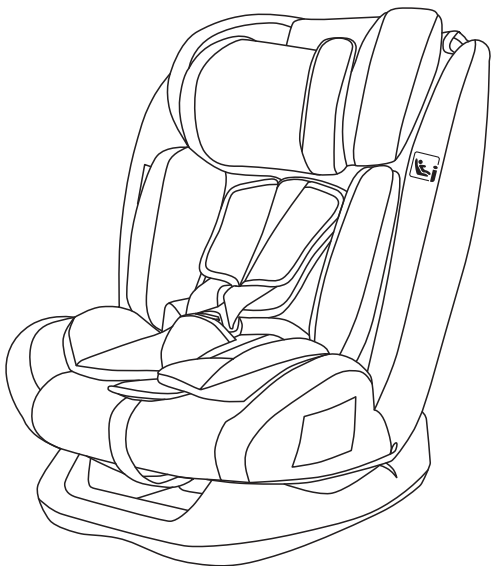

Universal belted ECRS
Child height: 40 - 105cm

Item Code: 817950

WARNING

This is a universal belted enhanced child restraint system. It is approved according to UN Regulation No. 129/03, for use primarily in "Universal seating positions" as indicated by vehicle manufacturers in the vehicle user's manual. If in doubt, consult either the enhanced child restraint system manufacturer or the retailer.

NEVER USE A CHILD SEAT IN THE REARWARD FACING POSITION ON ANY SEAT WHERE THERE IS AN ACTIVE FRONTAL AIRBAG INSTALLED.

CONTENTS

1. Safety warnings	01
2. Structure name	02
3. Installation position	04
4. Installation with adult safety belt (40-105cm)	05
5. Using a 5-point harness	07
6. Recline adjustment	09
7. 5-point harness adjustment	10
8. Headrest adjustment	11
9. Maintenance	12


1. SAFETY WARNINGS

Thank you for purchasing our child seat. Please ensure you fully read and follow the instructions provided. Please retain instructions for future use. If you have any further questions please contact your local store.




- Before using, please read the instruction manual carefully. The product is a safety product and is only safe when used in accordance with the instruction manual.
- This car seat is compliant with ECE R129/03.
- Do not use a child seat if the vehicle seat is equipped with an active front air bag. This can be dangerous. This does not apply to side airbags.
- It is most important that the seat belt is correctly routed.
- Never make unauthorised modifications or changes to the product.
- Never use the child car seat if it has been in an accident, or if it has become badly worn.
- Do not leave your children in the seat unattended at any time.
- In hot weather the plastic and metal parts of the product may become hot. You should cover the seat when not in use, especially when your car is parked in the sun.
- Ensure that all luggage and objects likely to cause injury in the event of an accident are properly secured.
- Never use the child car seat without the cover. Only covers approved by the manufacturer can be used.
- The child car seat must be secured when not in use.
- Store this child car seat in a safe place when it is not being used. Avoid placing heavy objects on it.
- Most accidents occur on short trips. Therefore, do not be tempted to avoid using the seat simply because you are not travelling very far.
- Keep the plastic bag away from your child as it could cause suffocation.
- Do not expose the child seat to any corrosive substances. Use a wet towel to clean the plastic body of the child seat.
- Make sure the child car seat belt is adjusted to a suitable position and ensure the belt is not twisted.
- Please ensure the lap belt is worn low down across the pelvis.
- Do not use this product second hand as you may never know its history.
- The rigid items and plastic parts of a child restraint must be located and installed so that they are not liable, during everyday use of the vehicle, to become trapped by a movable seat or in a door of the vehicle.
- Ensure that the seat is not damaged by heavy luggage, movable seats or slamming the car door etc.
- This product is only suitable if the vehicle is fitted with 3-point retractor safety belts, approved to UN/ECE Regulation NO.16 or other equivalent standards.

2. STRUCTURE NAME

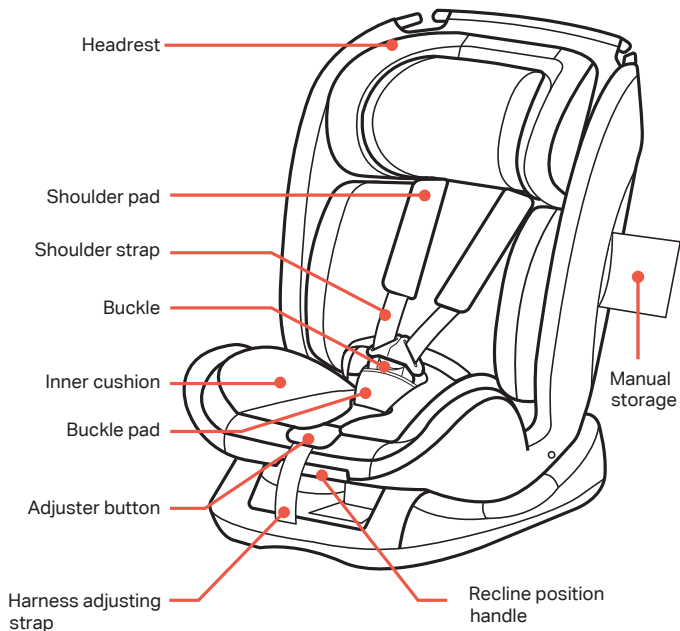


Important:

Inner cushion is suitable for use for a child with a height range of 40-75cm.

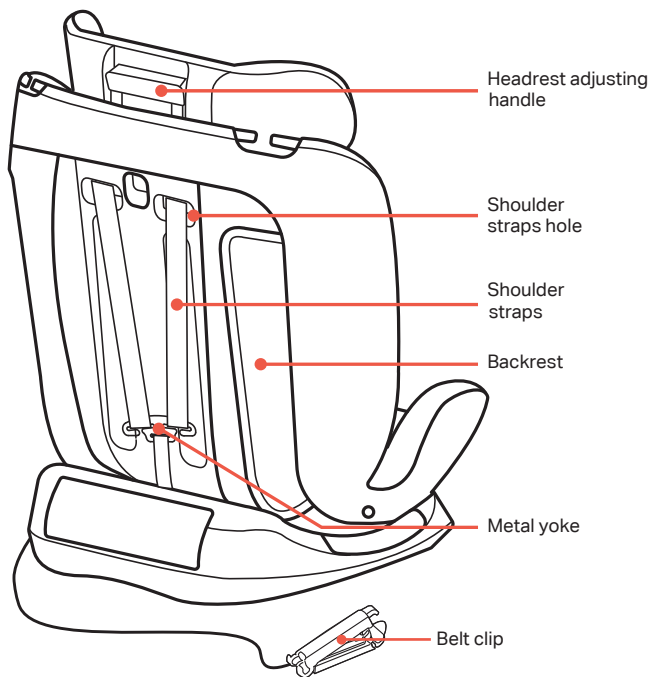

Take care of all parts. If any parts are missing please contact the retailer or manufacturer. The seat should not be used if any parts are damaged.

3. INSTALLATION POSITION

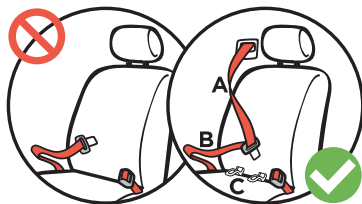

- A** Car Safety Belt: Diagonal Belt
- B** Car Safety Belt: Lap Belt
- C** ISOFIX Attachments

This car seat is suitable for conventional use in cars equipped with 3-point seat belts that are fitted in accordance with European Standard (ECE - 16 or equivalent standard). It is not suitable for cars only equipped with 2-point seat belts.




The suitable location for installation in the car are shown on the left:



- X** Do not install a child car seat.
- ✓** Safe to install a child car seat.
- A** Only suitable for use fitted with 3-point safety belts approved to ECE Regulation No.16 or other equivalent standards.
- B** Do not use this child seat in a passenger seat equipped with active airbags.




4. INSTALLATION WITH ADULT SAFETY-BELT (40-105CM)

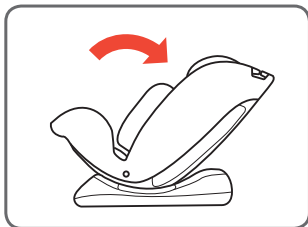


Rearward Facing:

Child height 40cm-105cm


Recline the seat to the rearward recline position, indicated by an arrow on the seat base. When in this position the arrow on the base and the seat itself will be aligned (max recline position).

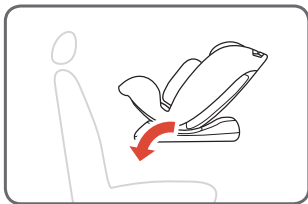


Place the child seat in the desired seat in the car, ensure it is in the rearward-facing position.

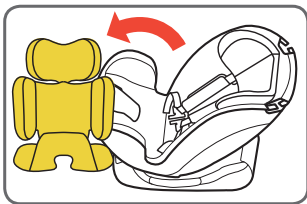


Unclip the harness and remove the inner cushion.

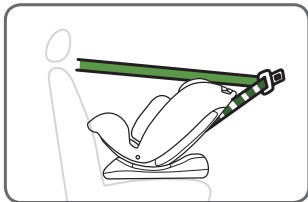


Extend the car seat belt fully.

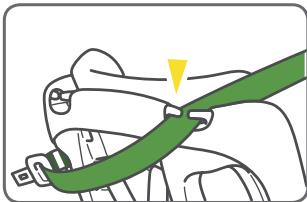


Pass the diagonal part of the car seat belt through the clip on the guide on the child seat, as shown above.

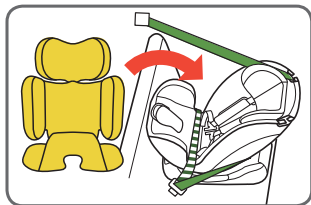


Pass the lap belt section of the car seat belt through the middle of the child seat, as shown above. The diagonal part of the seat belt shall be located around the back of the child seats backrest, as shown above.

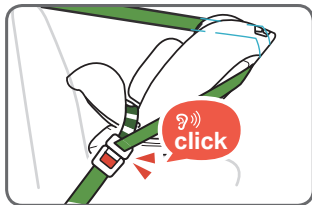


Insert the car seat belt end into the buckle until you hear an audible click.

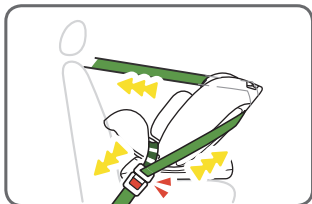

Holding down on the car seat, pull the car seat belt tight, removing any slack.

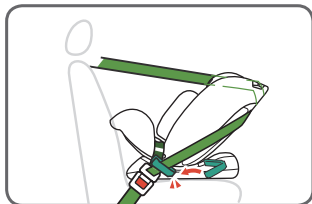

Use the belt clip to clip around the seat belt, just above the seat belt buckle, as shown above.

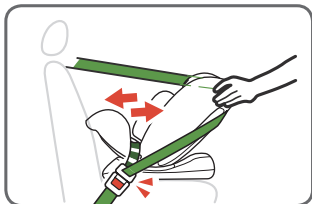


Gently push on the seat to ensure it is secured in place. Check all the straps are tight and have no excess slack.

Please note: the seat will have some movement when pushed side to side, this is normal.



Before using the child seat, make sure that the seat is firmly installed and that the belts are not twisted.


5. USING A 5-POINT HARNESS

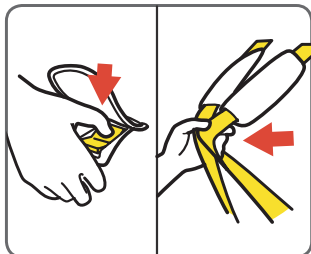


Whilst pressing the harness adjustment button, pull forwards on the 2 shoulder pads of the 5-point harness.



Place the child in the child seat and pass both arms through the harnesses.

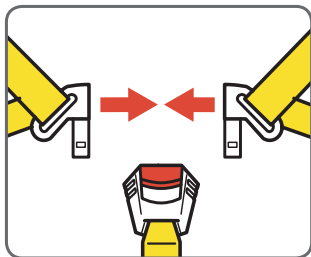


Combine the two buckle pieces together as shown above.

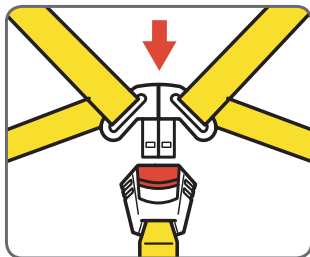


Insert the buckle ends into the 5-point harness buckle, as shown above.




Under no circumstances shall the 5-point safety harness be used with only one side of the buckle engaged.

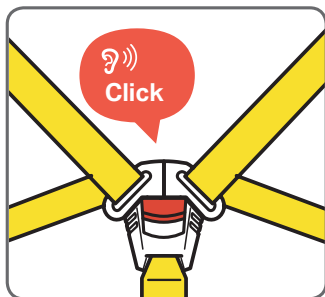


A "click" sound is heard to indicate the buckle is correctly engaged.

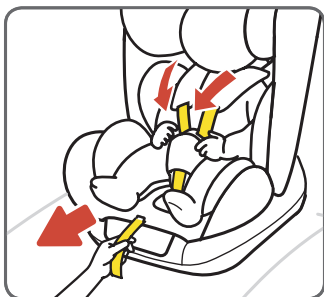

To tighten the harness straps, pull the harness adjustment strap at the base of the seat.

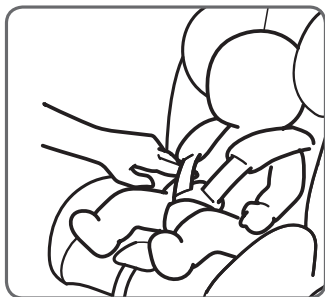

When tightening the harness, tighten until the straps are sitting close to your child's chest. Ensure you do not over tighten the straps.

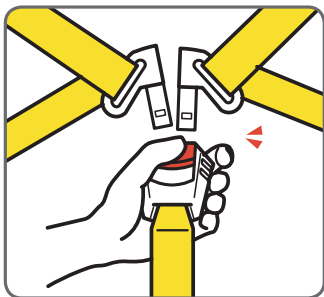



Press the red button to disengage the buckle.

The style of the buckle may vary.

⚠ WARNING:

Over-relaxed seat belts are not conducive in protecting a child's safety.

6. RECLINE ADJUSTMENT

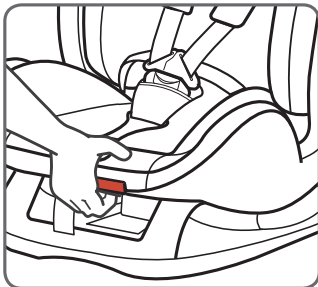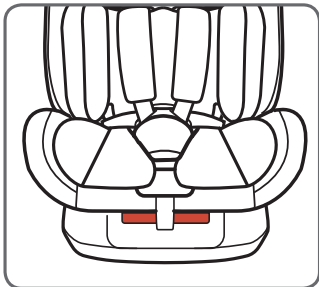

To adjust the recline position of the seat, pull the red recline position handle. While pulling the handle, simply adjust the position of the seat up or down. Always ensure the seat is clicked/fixed into position after making any adjustments.




Rearward Facing:

Child height 40cm-105cm

The child seat must only be used in the most reclined position when installed in the rearward-facing position.

7. 5-POINT HARNESS ADJUSTMENT

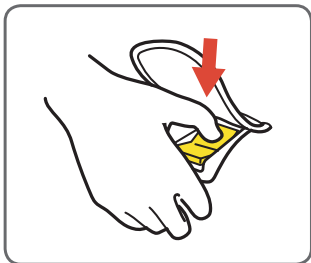


Adjust the harness according to the child. Ensure the harness is not twisted.

Press the harness adjustment button




To loosen

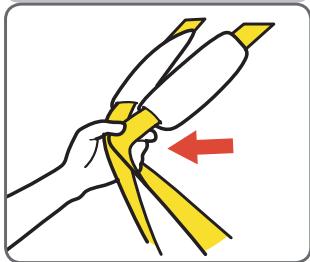

Whilst pressing the harness adjustment button, pull forwards on the 2 shoulder pads of the 5-point harness.


To tighten

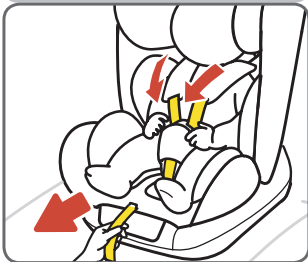


To tighten the harness straps, pull the harness adjustment strap at the base of the seat.

When tightening the harness tighten until the straps are sitting close to your child's chest. Ensure you do not over tighten the straps.

8. HEADREST ADJUSTMENT

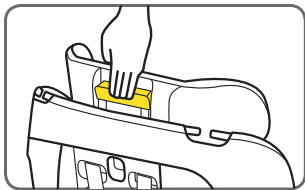


In order to adjust the headrest height there is an adjustment handle on the back of the headrest.

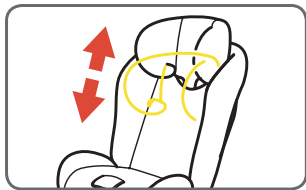


Squeeze and pull the handle up to lift the headrest up, or squeeze and push the handle down to lower the headrest.

When adjusting the headrest, ensure it is locked in position after adjustment, you will hear it click.


Always check the shoulder strap positions, especially after adjusting the headrest.

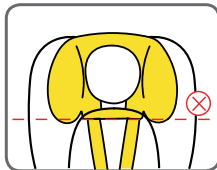

No - Too low

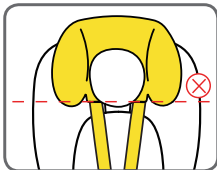

No - Too high

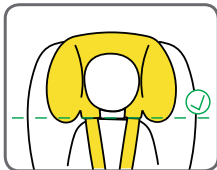


Yes - Correct

Important: Please make sure the shoulder strap positions are a little higher than the child's shoulder height. Always ensure the harness is the same length on both sides.


Please make sure the child's head is positioned in the middle of the headrest. The top shoulder strap position needs to be a little higher than shoulder height before using the child seat. This will provide effective protection in case of a collision.

9. MAINTENANCE


How to remove the seat cover for cleaning

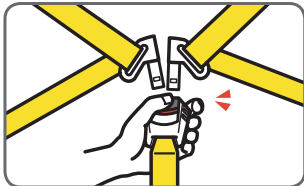

Press the red button to disengage the buckle.

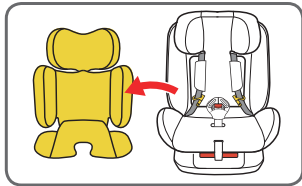


Remove the inner cushion.

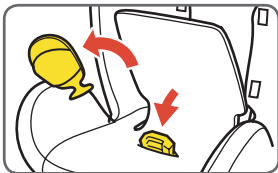


Remove the buckle padding/cover, store this safe for any future use. The buckle itself will be stored in the seat base. In the centre of the seat base cover there is a slot, lift this slot as well as the foam padding underneath the cover. This will reveal a gap in the base where the buckle will slot into. Place the buckle part into this slot, ensure the foam is pushed back down over the top of the buckle.




Flap up the lower part of the headrest cover, this part sits on the backrest of the seat.

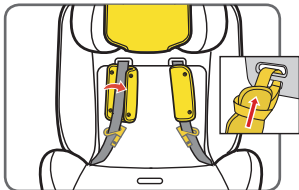


You will need to remove the shoulder strap pads. On the backrest where the shoulder strap is connected to the backrest, there is a loop, pull the loop down to create a bigger gap. Once the gap is big enough slide the shoulder pad through this gap.

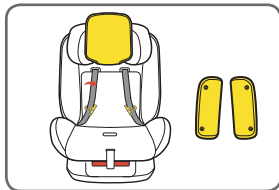

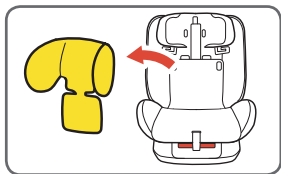

Remove the headrest cover.

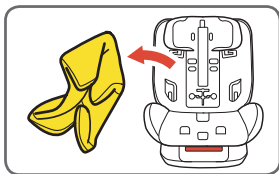

Remove the main seat cover, you will need to open the 2 snap fasteners on the side of the seat to fully remove the cover. Once the cover is unclipped and is loose, pull the cover off the seat, starting from the bottom and lifting upwards.

Seat cloth cover mounting:

To reattach the cover and stap padding, follow the reverse of these instructions.

Cleaning the cloth cover

The cover and plastic parts of the child seat can be cleaned with a wet cloth using a mild detergent and warm water. Ensure no soap gets into the buckle or adjusters. Do not use chemical cleaners or bleach on any part of the car seat. Dry thoroughly before use.



CONTACT US

UK: Halfords Ltd, B98 0DE

www.halfords.com

ROI: Halfords c/o DWF, Dublin 1

www.halfords.ie

Item Code: 817950